
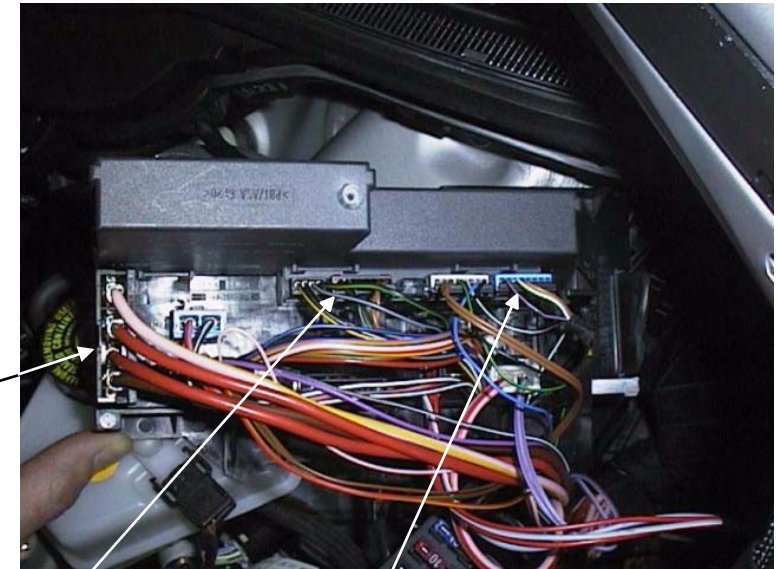


Fuse box, engine compartment

HOW TO SYNCHRONIZE THE CAN INTERFACE:

- 1) Insert the 25A fuse. => LED will start flashing.
- 2) Turn on ignition. => The LED will stop flashing within 30 seconds.
The alarm is now synchronized.

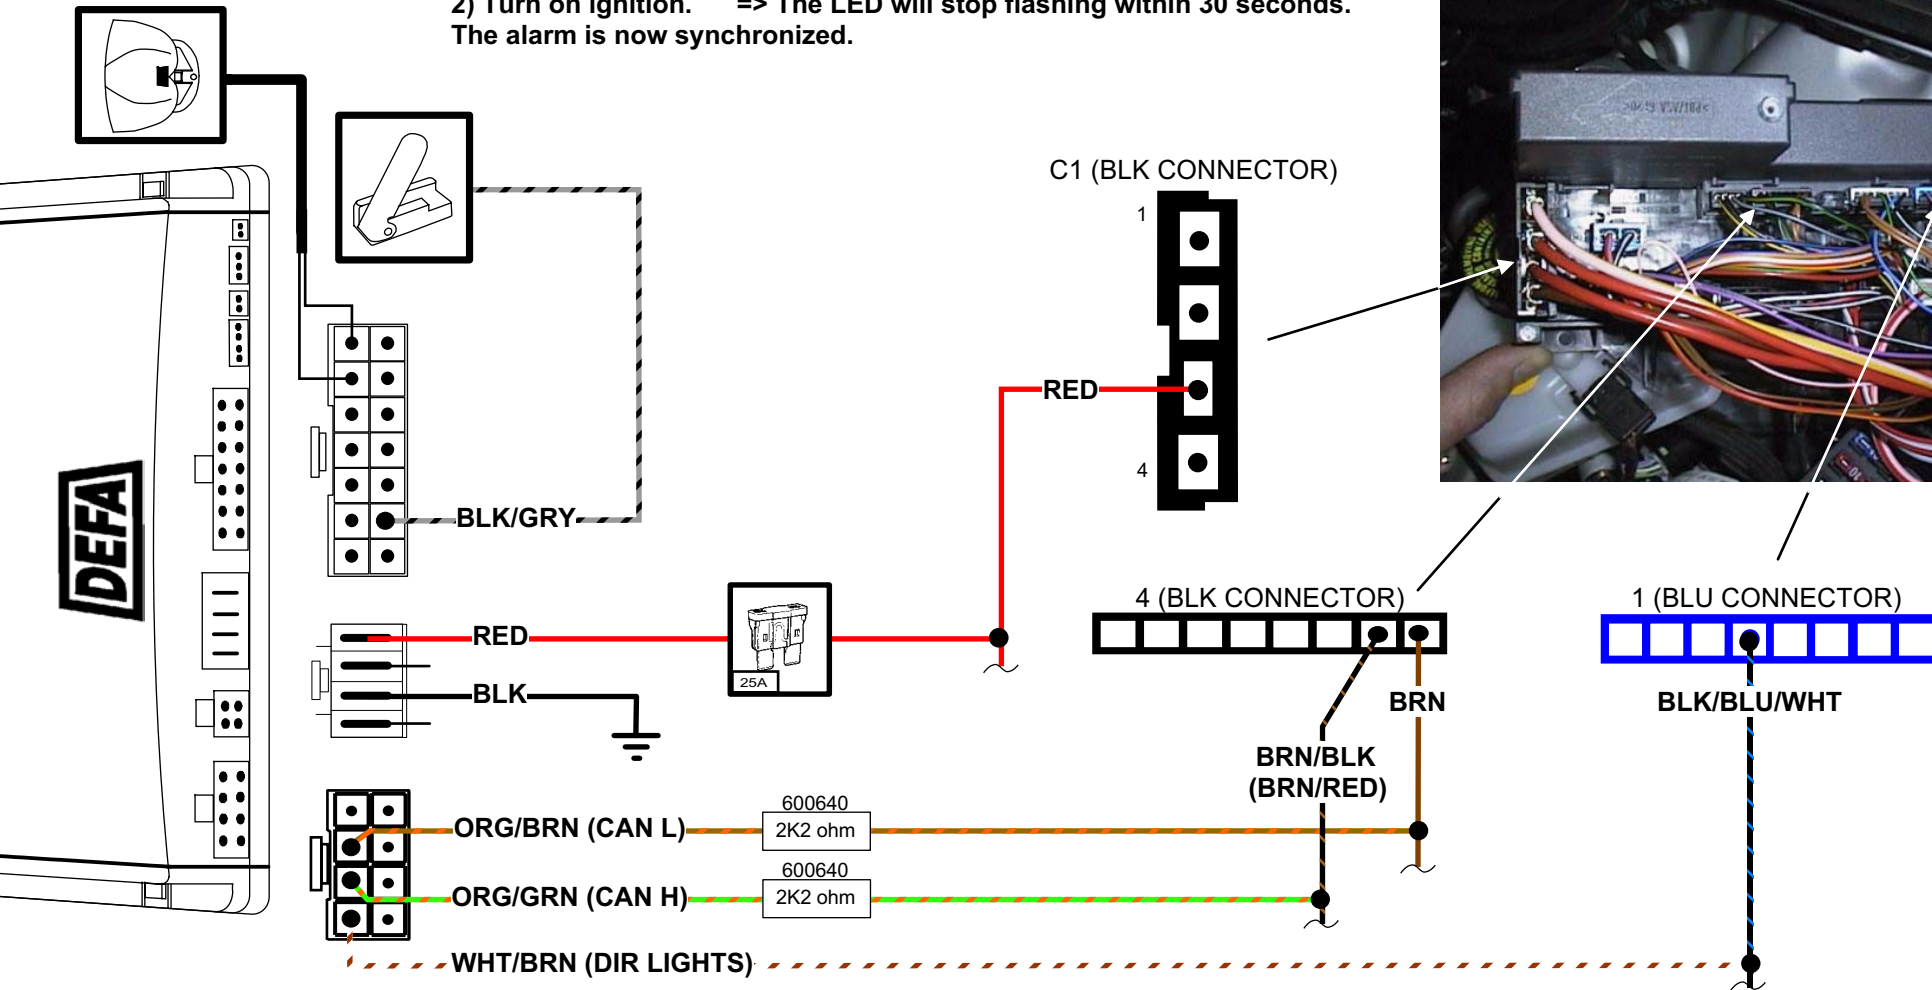

REQUIRED:
- Central unit rev: A => F.

OR:

REQUIRED:
- Minimum central unit rev: G
- Minimum software rev: 02-4.
- 2 Resistors 2K2 (1x600640).

NB ! This installation diagram must only be used as a guideline for the installation. Equipment delivered with the car varies considerably from model to model and from market to market. Before starting the installation, be sure to check carefully the original diagram from the car manufacturer. DEFA A.S is not liable to compensate for possible damages that may occur due to faulty or insufficient installation manuals.

Date : 2004. 09.02
Rev : B
Page: 1 of 2

