



NB ! This installation diagram must only be used as a guideline for the installation. Equipment delivered with the car varies considerably from model to model and from market to market. Before starting the installation, be sure to check carefully the original diagram from the car manufacturer. DEFA A.S is not liable to compensate for possible damages that may occur due to faulty or insufficient installation manuals.

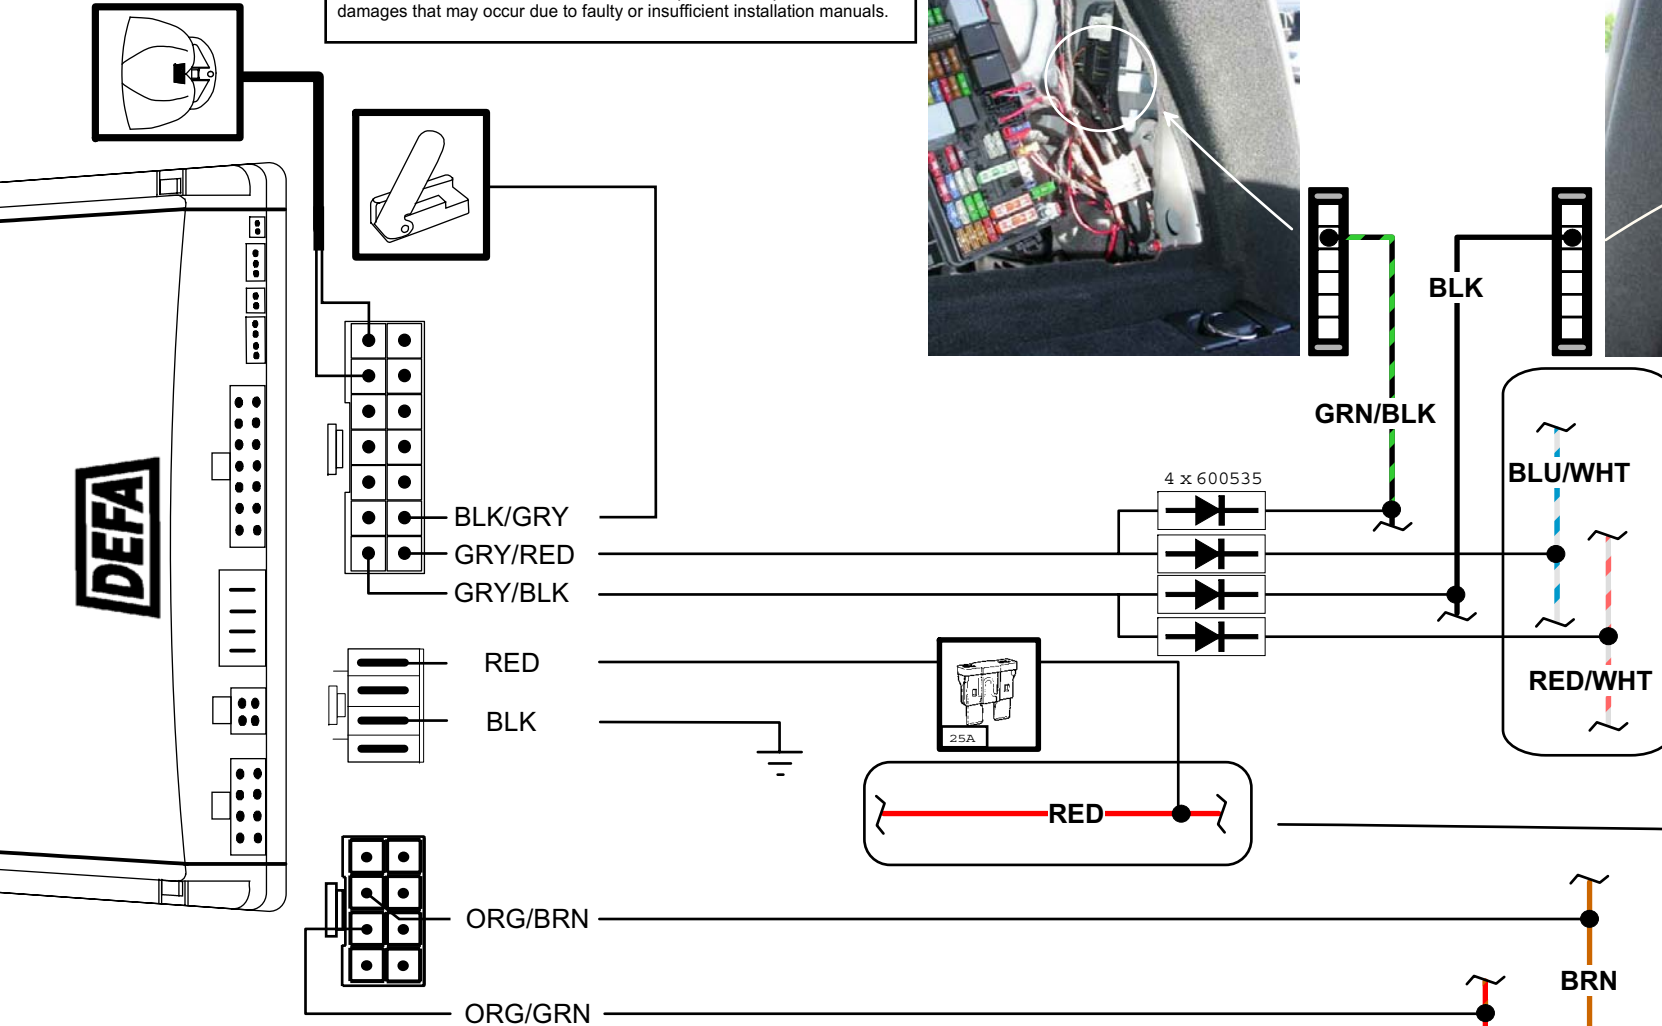

NOTE!!!
BLU/WHT AND RED/WHT ARE
DIRECTION INDICATORS.
CONFIRM WITH MULTIMETER BEFORE
CONNECTING!!!!

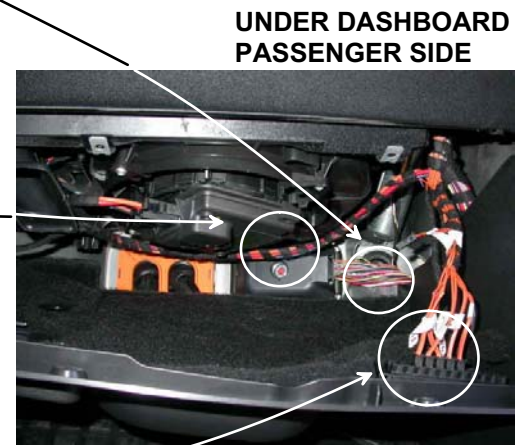

REQUIRED:
- Minimum Required Central Unit rev: F
- Minimum Required Software: 08
- 4 Diodes (1 x 600535)
(600535 includes 4 diodes)

NOTE!!!
HOW TO SYNCHRONIZE CAN INTERFACE:
1) INSERT 25A FUSE
=> LED WILL START FLICKERING
2) PRESS UNLOCK BUTTON ON REMOTE SEVERAL TIMES
=> LED WILL STOP FLICKERING WITHIN 30 SECONDS
THE ALARM IS NOW SYNCHRONIZED



Date : 2005.09.12
Rev : A
Page: 1 of 2

