



REQUIRED:

- Minimum Required Central Unit rev: F
- Minimum Required SoftWare: 15-5
- Diodes (1 x 600535)

NOTE!!!

HOW TO SYNCHRONIZE CAN INTERFACE:

- 1) INSERT 25A FUSE => LED WILL START FLICKERING
- 2) TURN ON IGNITION => LED WILL STOP FLICKERING WITHIN 30 SECONDS
 THE ALARM IS NOW SYNCHRONIZED

TO ARM WITHOUT SENSORS:

TURN ON AND OFF IGNITION FOR LESS THAN TWO SECONDS.
 PRESS ARM-BUTTON ON REMOTE ONCE.



