



## CAR SECURITY

### SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00

www.cobra.it

MAKE **ALFA ROMEO**

MOD.

**147\***

YEAR.

**00** →

PETROL

DIESEL

\* Models with original equipment keyless entry system.

#### ALARM/SIREN POSITION

Position the compact alarms and the sirens on the support of the servobrake in the engine compartment.

#### CENTRAL UNIT POSITION

The modular systems and the modules should be positioned under the dashboard, driver's side.

#### POWER SUPPLY

**+30:** connect to the positive end of the battery.  
**-31:** connect directly to the car body.

#### IGNITION WIRE

**+15/54:** Connect to the 2 mm<sup>2</sup> ORANGE wire located in the wiring harness coming out of the connector of the ignition key.

#### DIRECTION INDICATORS

The electric system of the car has the direction indicators lines divided, so it is suggested to divide the wires of the direction indicators ant. and post. by means of 4 diodes: LIGHT BROWN/BLACK (ant. left), BROWN/VIOLET (ant. right), BROWN/WHITE (lat. left), BROWN/YELLOW (lat. right), these wires are located in the 40 way light blue connector and BROWN/BLACK (post. left), BROWN/VIOLET (post. right) are located in the 40 way black connector in the fuse box.

**Note: do not put the diodes on the lines of the lateral direction indicators.**

#### ELECTRIC WINDOWS

##### Positive control signal

##### Front window, driver's side:

cut the the 1 mm<sup>2</sup> GREY wire located in the 26 way connector inside the driver's side door.

##### Front window, passenger's side:

cut the 1 mm<sup>2</sup> VIOLET/BLACK wire located in the wiring harness behind the sill cover driver's side.

#### ACTIVAT./DEACTIVATION CONTROLS

##### Connections antitheft/vehicle

##### Art.3800

YELLOW/BLACK

##### Vehicle

GREEN/YELLOW

##### Position

coming out driver's side door

GREY/BLACK

GREEN/GREY

coming out driver's side door

VIOLET

BROWN/YELLOW

40 way connector (direc. indic.)

ORANGE

Ground

car body

VIOLET/WHITE

Ground

car body

ORANGE/WHITE

Ground

car body

**Note: to program activation and deactivation controls of the antitheft DO NOT USE the door contact control as there are negative signals not usable for programming.**

#### IMMOBILISATION POINT

##### Fuel pump

Cut the 2 mm<sup>2</sup> VIOLET/YELLOW wire located in the bundle of cables behind the sill cover, driver's side.

#### STARTER

**+50:** Cut the BROWN wire located in the wiring harness coming out of the ignition key.

#### BONNET SWITCH

Install an additional switch on the front headlamp support grill, driver's side.

#### DOORS SWITCH

Connect to the LIGHT BLUE/YELLOW wire located in the wiring harness coming out of the lamp.

#### BOOT SWITCH

Connect to the BROWN/GREY wire coming out of the boot lamp.

**Note: for the programming of the antitheft (activation and deactivation controls) use the boot control.**