



SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00

www.cobra.it

MAKE **ALFA ROMEO** MOD. **147*** YEAR. **03** → PETROL DIESEL

* Models with original equipment keyless entry system.

- ALARM/SIREN POSITION** Position the compact alarms and the sirens on the support of the servobrake in the engine compartment.
- CENTRAL UNIT POSITION** The modular systems and the modules should be positioned under the dashboard, driver's side.
- POWER SUPPLY** **+30:** connect to the positive end of the battery.
-31: connect directly to the car body.
- IGNITION WIRE** **+15/54:** Connect to the 2 mm² ORANGE wire located in the wiring harness coming out of the connector of the ignition key.
- DIRECTION INDICATORS** The electric system of the car has the direction indicators lines divided, so it is suggested to divide the wires of the direction indicators ant. and post. by means of 4 diodes: LIGHT BROWN/BLACK (ant. left), BROWN/VIOLET (ant. right) located in the 40 way light blue connector, and BROWN/BLACK (post. left), BROWN/VIOLET (post. right), located in the 40 way black connector, in the fuse box.
Note: pls. do not connect the lines of the lateral direction indicators.
- ELECTRIC WINDOWS** **Positive control signal**
Front window, driver's side:
cut the the 1 mm² GREY wire located in the 26 way connector inside the driver's side door.
Front window, passenger's side:
cut the 1 mm² VIOLET/BLACK wire located in the wiring harness behind the sill cover driver's side.
- ACTIVAT./DEACTIVATION CONTROLS** **Connections antitheft/vehicle**
- | Art.3800 | Vehicle | Position |
|--------------|--------------|--|
| YELLOW/BLACK | GREEN/YELLOW | wiring harness coming out driver's side door |
| GREY/BLACK | GREEN | wiring harness coming out driver's side door |
| VIOLET | BROWN/YELLOW | 40 way connector (lateral right direc. indic.) |
| ORANGE | ground | car body |
| VIOLET/WHITE | ground | car body |
| ORANGE/WHITE | ground | car body |
- Note: to program activation and deactivation controls of the antitheft DO NOT USE the door contact control as there are negative signals not usable for programming.**
- IMMOBILISATION POINT** **Fuel pump**
Cut the 2 mm² VIOLET/YELLOW wire located in the bundle of cables behind the sill cover, driver's side.
- STARTER** **+50:** Cut the BROWN wire located in the wiring harness coming out of the ignition key.
- BONNET SWITCH** Install an additional switch on the front headlamp support grill, driver's side.
- DOORS SWITCH** Connect to the LIGHT BLUE/YELLOW wire located in the wiring harness coming out of the lamp.
Note: for the programming of the antitheft (activation and deactivation controls) pls. do not open the door but the boot.
- BOOT SWITCH** Connect to the BROWN/GREY wire coming out of the boot lamp.
Note: for the programming of the antitheft (activation and deactivation controls) use the boot control.