



CAR SECURITY

SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

www.cobra.it

MAKE	ALFA ROMEO	MOD.	156	YEAR	00 →	PETROL <input type="checkbox"/>	DIESEL <input checked="" type="checkbox"/>
ALARM/SIREN POSITION	Position the compact alarms and the sirens behind the left or right lateral headlamp, it depends on the vehicle version.						
CENTRAL UNIT POSITION	The modular systems and the modules should be positioned under the dashboard, driver's side.						
POWER SUPPLY	+30: connect to the general supply wiring at the entrance of the fuse box. -31: connect directly to the car body.						
IGNITION WIRE	+15/54: connect to the RED/ORANGE wire located in the 20 way white connector in the front part of the fuse box. Alternatively, in the wiring harness located under the sill cover, driver's side.						
DIRECTION INDICATORS	Connect to the 1 mm ² LIGHT BLUE wire in the 20 way white connector and LIGHT BLUE/BLACK in the 12 way connector. These connectors are located in the front part of the fuse box, under the dashboard, drivers side. Alternatively in the wiring harness under the sill cover, driver's side.						
ELECTRIC WINDOWS	Positive control signal Front window, driver's side: cut the BROWN/WHITE wire. Front window, passenger's side: cut the VIOLET/WHITE wire. Connections must be done in the wiring harness coming out of the connector of the centrallocated behind the glove compartment, passenger's side. Rear window, driver's side: cut the YELLOW/RED wire. Rear window, passenger's side: cut the LIGHT BLUE/GREEN. Connections must be done in the wiring harness under the sill cover, driver's side.						
CENTRAL DOORS LOCKING	Negative control signal Connect to the 1 mm ² WHITE wire (lock) and LIGHT BLUE (unlock). These wires are in the wiring harness and coming out of the right connector of the central door locking unit located at the rear right side of the glove compartment; alternatively in the wiring harness located in the sill cover, driver's side.						
IMMOBILISATION POINT 1	Gasoil pump Cut the BLACK/VIOLET wire coming out of the wiring harness of the inertial switch located under the driver's side seat.						
IMMOBILISATION POINT 2	Cut the ORANGE wire in a connector coming out of the central engine plant located under the dash board, passenger's side.						
STARTER	+50: Cut the 2 mm ² RED/BLACK wire located in the wiring harness coming out of the connector of the ignition key.						
BONNET SWITCH	Install an additional switch on the front headlamp support grill, driver's side.						
DOORS SWITCH	Connect to the WHITE/BLUE wire located in the black connector under the left side of the dashboard near the handle of the bonnet. Alternatively, in the wiring harness under the sill cover, driver's side.						
BOOT SWITCH	Connect to the 1 mm ² RED wire located in the connector mentioned above; alternatively in the wiring harness located in the sill cover, driver's side.						