



## CAR SECURITY

### SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

[www.cobra.it](http://www.cobra.it)

MAKE **ALFA ROMEO** MOD. **156** YEAR **97** → PETROL  DIESEL

<b>ALARM/SIREN POSITION</b>	Position the compact alarms and the sirens behind the left or right lateral headlamp, it depends on the vehicle version.
<b>CENTRAL UNIT POSITION</b>	The modular systems and the modules should be positioned under the dashboard, drivers side.
<b>POWER SUPPLY</b>	<b>+30:</b> connect to the general supply wiring at the entrance of the fuse box. <b>-31:</b> connect directly to the car body.
<b>IGNITION WIRE</b>	Connect to the RED/ORANGE wire located in the 20 way white connector in the front part of the fuse box. Alternatively, in the wiring harness located under the sill cover, drivers side.
<b>DIRECTION INDICATORS</b>	Connect to the 1 mm <sup>2</sup> LIGHT BLUE wire in the 20 way white connector and LIGHT BLUE/BLACK in the 12 way connector. These connectors are located in the front part of the fuse box, under the dashboard, drivers side. Alternatively in the wiring harness under the sill cover, drivers side.
<b>ELECTRIC WINDOWS</b>	<b>Positive control signal</b> <b>Front window, driver's side:</b> cut the BROWN/WHITE wire. <b>Front window, passenger's side:</b> cut the VIOLET/WHITE wire.
<b>CENTRAL DOORS LOCKING</b>	<b>Negative control signal</b> Connect to the 1 mm <sup>2</sup> WHITE wire (lock) and LIGHT BLUE (unlock). These wires are in the wiring harness and coming out of the right connector of the central door locking unit located at the rear right side of the glove box.
<b>IMMOBILISATION POINT 1</b>	<b>Fuel pump</b> Cut the 1 mm <sup>2</sup> BROWN/WHITE wire located in the 20 way white connector in the fuse box. Alternatively, in the wiring harness located under the sill cover, drivers side.
<b>IMMOBILISATION POINT 2</b>	Cut the GREY/ORANGE wire coming out of the relay located in the relay holder between the left former headlamp and the battery.
<b>STARTER</b>	<b>+50:</b> Cut the 2 mm <sup>2</sup> RED/BLACK wire located in the wiring harness coming out of the connector of the ignition key.
<b>BONNET SWITCH</b>	Install an additional switch on the front headlamp support grill, driver's side.
<b>DOORS SWITCH</b>	Connect to the WHITE/BLUE wire located in the black connector under the left side of the dashboard near the handle of the bonnet. Alternatively, in the wiring harness under the sill cover, drivers side.
<b>BOOT SWITCH</b>	Connect to the 1 mm <sup>2</sup> RED wire located in the connector mentioned above.