



## CAR SECURITY

### SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00

www.cobra.it

MAKE

**ALFA**

MOD.

**166\***

YEAR.

**98** →

PETROL   
DIESEL

\* Models with original equipment keyless entry system.

#### ALARM/SIREN POSITION

Position the compact alarms and the sirens in the engine compartment, between the ABS system and the headlamp, drivers side.

#### CENTRAL UNIT POSITION

Position the modular system and the modules under the sill cover, passengers side. Alternatively under the dashboard, drivers side.

#### POWER SUPPLY

**+30:** Connect to the 5 mm<sup>2</sup> RED wire located in the general supply wiring of the fuse box.

**-31:** Connect with a terminal directly to the car body.

#### IGNITION WIRE

**+ 15/54:** connect to the 0,5 mm<sup>2</sup> LIGHT BLUE wire in the bundle of cables located under the sill cover, drivers side.

#### DIRECTION INDICATORS

Connect to the 1 mm<sup>2</sup> LIGHT BLUE and LIGHT BLUE/BLACK wires located in the bundle of cables under the sill cover, drivers side.

#### ELECTRIC WINDOWS

##### Positive control signal

**Front window, driver's side:** cut the 1,5 mm<sup>2</sup> LIGHT BLUE/RED wire.

**Front window, passenger's side:** cut the 1,5 mm<sup>2</sup> GREY wire.

The wires are in the connector coming out of the green modular system of the windows unit under the central tunnel. You will come in removing the left lateral bulkhead, passengers side.

**Rear window, driver's side:** cut the 1,5 mm<sup>2</sup> GREY/RED wire.

**Rear window, passenger's side:** cut the 1,5 mm<sup>2</sup> BROWN wire.

The wires are in the connector coming out of the black modular system of the windows unit behind the right lateral bulkhead of the boot, passengers side.

#### ALARM CONTROLS

##### For trigger box art. 0144

Connect directly to the ends of the doors motor. The wires have a negative polarity at rest.

#### IMMOBILISATION POINT 1

##### Fuel pump

Cut the 1,5 mm<sup>2</sup> PINK/WHITE wire located in the bundle of cables under the left sill cover, drivers side.

#### STARTER

**+50:** Cut the BLACK wire located in the wiring harness that comes out of the 3 way black connector on the right of the steering column.

#### BONNET SWITCH

Install an additional switch on the headlamp support plate, near the rubber trim of the bonnet.

#### DOORS SWITCH

Connect to the WHITE/BLACK wire located in the wiring harness that comes out of the 10 way white connector behind the left lateral bulkhead, drivers side.

#### BOOT SWITCH

Connect to the 1 mm<sup>2</sup> VIOLET/WHITE wire located in the wiring harness coming out of the 20 way white connector behind the right lateral bulkhead, passengers side.