



## SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

**REV. 00**

[www.cobra.it](http://www.cobra.it)

MAKE	<b>AUDI</b>	MOD.	<b>A3</b>	YEAR	<b>03</b> →	PETROL <input checked="" type="checkbox"/> DIESEL <input type="checkbox"/>
<b>ALARM/SIREN POSITION</b>	Position the compact alarms and the sirens on the support near the locking of the bonnet.					
<b>CENTRAL UNIT POSITION</b>	Position the modular systems and the modules under the central tunnel or under the passenger's side seat.					
<b>POWER SUPPLY</b>	<b>+30:</b> connect directly to the positive pole of the battery. <b>-31:</b> connect directly to the ground terminal located behind the driver's side sill cover.					
<b>IGNITION WIRE</b>	<b>+15/54:</b> connect to the 2 mm <sup>2</sup> BLACK wire, in the wiring harness coming out of the fuse box located on the left side of the dashboard.					
<b>DIRECTION INDICATORS</b>	Connect to the BLACK/WHITE wire at the position nr. 11 and to the BLACK/GREEN wire at the position nr. 9 located in the 21 way light brown connector, marked "D", BLACK/GREEN wire at the position nr.10 in the black connector marked "B", BLACK/WHITE wire at the position nr.11 in the light brown connector, marked "C" and to the BLACK/WHITE wire at the position nr.8 and to the BLACK/GREEN wire at the position nr.6, in the 12 way black connector, marked "A". To make the connection it is necessary to separate the lines by means of diodes.					
<b>CENTRAL DOORS LOCKING</b>	<b>Negative control signal</b> Connect with both unlock and lock wires (VIOLET and ORANGE) of the antitheft and to the BLUE/WHITE wire, at the position nr.13, in the 20 way black connector, directly inside the driver's side door. As alternative, you can find the same wires in the wiring harness coming out of the central locking motor of the central locking unit, inside the driver's side door. <b>Note:</b> it is necessary to insert a 180 Ohm resistance in serie to the ORANGE wire of the antitheft					
<b>IMMOBILISATION POINT</b>	<b>Fuel pump</b> Cut the BLACK/BLUE wire in the wiring harness coming out of the fuse nr.29, in the fuse box located on the left side of the dashboard.					
<b>STARTER</b>	<b>+50:</b> Cut the 0,35 mm <sup>2</sup> RED/BLACK wire, at the position nr.1, in the 12 way black connector, marked "G", in the central located under the driver's side dashboard.					
<b>BONNET SWITCH</b>	Connect to the BROWN/LIGHT BLUE wire, in the wiring harness coming out of the bonnet lamp.					
<b>DOORS SWITCH</b>	Connect to the BROWN/WHITE wire in the wiring harness behind the lateral bulkhead, driver's side.					
<b>BOOT SWITCH</b>	Connect to the BLACK/RED wire, at the position nr.8, in the wiring harness coming out of the 17 way light brown connector, in the central located in the rear covering of the passenger's side boot.					