



CAR SECURITY

SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00

www.cobra.it

MAKE	AUDI	MOD.	A3	YEAR.	98 →	PETROL	<input checked="" type="checkbox"/>	DIESEL	<input type="checkbox"/>
ALARM/SIREN POSITION	Position the compact alarms and the sirens in the engine compartment, on the ABS bracket. Pass the cables through the rubber sleeve located on the panel that divides the engine compartment and the passenger's compartment near the shock absorber, driver's side.								
CENTRAL UNIT POSITION	Position the modular systems and the modules on the left-hand side under the dashboard on the driver's side.								
POWER SUPPLY	+ 30: connect to the 4 mm ² RED wire located in the general supply wiring of the fuse box. - 31: connect with a ring terminal to one of the terminals coming out of the general power supply behind the lateral panel on the driver's side.								
IGNITION WIRE	+ 15/54: connect to the 2 mm ² BLACK wire located in the multiway connector in the central part of the fuse box on the left of the dashboard.								
DIRECTION INDICATORS	Connect to the 1,5 mm ² BLACK/WHITE and BLACK/GREEN wire located in the wiring harness under the sill cover on the left side of the driver's side.								
CENTRAL DOORS LOCKING AND ELECTRIC WINDOWS CLOSING	Negative control signal Connect to the GREY lock and RED/BROWN unlock wires at positions nr. 1 and nr. 3 located in the light brown connector behind the left panel, driver's side. Total closure To close the windows completely, you must set lock command wire to 24s.								
IMMOBILISATION POINT 1	Fuel pump Cut the 1,5 mm ² BLUE/RED wire located in the wiring harness under the left sill cover, driver's side.								
IMMOBILISATION POINT 2	Ignition key Cut the 1,5 mm ² BLACK/VIOLET wire located in the wiring harness coming out of the multiway connector in the fuse box.								
STARTER	+50: Cut the 1,5 mm ² BLACK/RED wire located in the wiring harness coming out of the connector of the ignition switch.								
BONNET SWITCH	Install an additional switch on the headlamp support plate, near the original bonnet bumper rubber.								
DOORS SWITCH	Connect to the BROWN/WHITE wire located in the wiring harness under the sill cover, on the left side, going to the rear.								
BOOT SWITCH	Connect to the 1 mm ² WHITE/BLACK wire at position nr.4 of the 6 way black connector on the left side of the boot.								