



CAR SECURITY

SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00

www.cobra.it

| | | | | | | | |
|------|-------------|------|------------|-------|-------------|--------|-------------------------------------|
| MAKE | AUDI | MOD. | A3* | YEAR. | 98 → | PETROL | <input type="checkbox"/> |
| | | | | | | DIESEL | <input checked="" type="checkbox"/> |

* Models with original equipment keyless entry system.

| | |
|------------------------------|--|
| ALARM/SIREN POSITION | Position the compact alarms and the sirens in the engine compartment, behind the left lateral headlamp. |
| CENTRAL UNIT POSITION | Position the modular systems and the modules under the dashboard, driver's side, on the left of the steering column. |
| POWER SUPPLY | + 30 : connect to the 4 mm ² RED wire located in a 2 way connector in the fuse box. - 31 : connect to one of the wires coming out of the grounding shunt up on the left lateral panel, driver's side. |
| IGNITION WIRE | + 15/54 : connect with a terminal to the pivot marked 15A located on the relayholder plate under the dashboard, driver's side. |
| DIRECTION INDICATORS | Connect to the 1,5 mm ² WHITE/BLACK and GREEN/BLACK wires located in the wiring harness coming out of the 3 way black connector, behind the left covering, driver's side. |
| ALARM CONTROLS | Negative control signal Connect to the RED/BLACK wire at the position nr. 11 of the 12 way black connector for the setting off and to the RED/BLUE or RED/BROWN wire at the position nr. 15 of the 16 way brown connector for the insertion. Both the connectors are located directly on the coming out of the original compressor. |
| IMMOBILISATION POINT | Gasoil pump Cut the 1,5 mm ² BLUE/BLACK wire located in the wiring harness coming out of the 3 way connector directly on the gas oil pump in the engine compartment. |
| STARTER | + 50 : Cut the 2 mm ² RED/BLACK wire located in the brown/violet connector on the rear of the relay marked 205 under the dashboard, driver's side. |
| BONNET SWITCH | Install an additional switch on the headlamp support plate, near the left headlamp. |
| DOORS SWITCH | To obtain the doors protection: (front door passenger's side, rear doors driver's and passenger's sides) connect the 0,5 mm ² BROWN/WHITE wire located at the position nr. 7 of the 15 way brown connector to the base of the pillar, driver's side. Connect to the BROWN/YELLOW wire located at the position nr. 8 of the above mentioned connector to obtain the protection of the front door, driver's side. |
| BOOT SWITCH | Connect to the BROWN/BLUE wire located at the position nr. 2 of the 16 way brown connector coming out of the compressor. |