



CAR SECURITY

SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00

www.cobra.it

MAKE

AUDI

MOD.

A4* 1.8

YEAR.

01 →

PETROL
DIESEL

* Models with original equipment keyless entry system.

ALARM/SIREN POSITION

Position the compact alarms and the sirens in the windshield wiper compartment, near the battery.

CENTRAL UNIT POSITION

The modular systems and the modules should be positioned under the moquette, on front of the driver's side seat, near the black box of the central doors locking unit.

POWER SUPPLY

+ 30: connect to the original shunting with a 6 mm² cable terminal located behind the black multifunction central unit, placed in an horizontal position, driver's side.
- 31: Connect directly to the original shunting with a 6 mm² cable terminal located behind the left lateral side on the base of the pillar, driver's side.

IGNITION WIRE

+ 15/54: Connect to the 2,5 mm² BLACK wire located in the wiring harness coming out of the ignition key.

DIRECTION INDICATORS

Connect to the BLUE/BLACK wire at the position nr.5 and to the GREEN/BLACK wire at the position nr. 7 located in the 23 way black connector of the black multifunction central unit placed in an horizontal position, driver's side.

ELECTRIC WINDOWS

Negative control signal

The closing of the electric windows is obtained timing the BLUE/WHITE wire located at the position nr. 8, placed in the 12 way black connector coming out of the central incorporated to the windows motor, inside the driver's side door.

ACTIVAT./DEACTIVATION CONTROLS

Connections antitheft/vehicle

Art.38XX	Vehicle	Position
GREY/BLACK	GREEN/GREY pos.3	12 way black connector
YELLOW/BLACK	GREEN/VIOLET pos.9	12 way black connector
VIOLET/WHITE	ground	car body
ORANGE	VIOLET/GREEN pos.7	12 way black connector
VIOLET	BLUE/WHITE pos.8	12 way black connector
ORANGE/WHITE	+30	positive in the fuse box

The connections of the GREEN/GREY and GREEN/VIOLET wires must be done in the 12 way black connector coming out of the central doors locking unit located under the moquette on front of the driver's side seat.

The connection of the VIOLET/GREEN and BLUE/WHITE wires must be done in the 12 way black connector, directly on the coming out of the central incorporated to the electric windows motor, inside the driver's side door.

IMMOBILISATION POINT

Fuel pump

Cut the 2,5 mm² RED/BLUE wire located at the position nr. 32, placed in the fuse box

STARTER

+50: Cut the 2,5 mm² RED/BLACK wire located in the wiring harness coming out of the ignition key.

BONNET SWITCH

Connect to the BROWN/VIOLET wire located at the position nr. 20, in the 20 way red connector located under the moquette, on front of the driver's side seat.

DOORS SWITCH

Connect to the BROWN/WHITE wire located at the position nr. 2, in the 12 way black connector, coming out of the central doors locking unit placed under the moquette, on front of the driver's side seat.

BOOT SWITCH

Connect to the WHITE/YELLOW wire located at the position nr. 16, of the 16 way light brown connector, coming out of the central doors locking unit placed under the moquette, on front of the driver's side seat.