



SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00

www.cobra.it

MAKE **AUDI** MOD. **A4*** YEAR. **03** → PETROL DIESEL

* Models with original equipment keyless entry system.

ALARM/SIREN POSITION	Position the compact alarms and the sirens in the windshield wiper compartment, near the battery.																					
CENTRAL UNIT POSITION	The modular systems and the modules should be positioned under the moquette, on front of the driver's side seat, near the black box of the central doors locking unit.																					
POWER SUPPLY	<p>+30: connect to the original shunting with a 6 mm² cable terminal located behind the black multifunction central unit, placed in an horizontal position, driver's side.</p> <p>- 31: Connect directly to the original shunting with a 6 mm² cable terminal located behind the left lateral side on the base of the pillar, driver's side.</p>																					
IGNITION WIRE	+15/54: Connect to the 2,5 mm ² BLACK wire located in the wiring harness coming out of the ignition key.																					
DIRECTION INDICATORS	Connect to the BLACK/GREEN wire at the position nr.4, to the BLUE/BLACK wire at the position nr. 9, to the GREEN/BLACK wire at the position nr. 7, to the GREEN/BLUE at the position nr. 6 located in the black connector and to the BLACK/BLUE wire at the position nr. 22 and to the BLACK/GREEN wire at the position nr. 21 located in the grey connector. The connectors are located on the coming out of the central fixed under the dashboard, driver's side. Refer to the fitting diagram nr. 181 .																					
ELECTRIC WINDOWS	<p>Negative control signal</p> <p>The closing of the electric windows is obtained timing the BLUE/WHITE wire located at the position nr. 8, placed in the 12 way black connector coming out of the central incorporated to the windows motor, inside the driver's side door.</p>																					
ACTIVAT./DEACTIVATION CONTROLS	<p>Connections antitheft/vehicle</p> <table border="0"> <thead> <tr> <th>Art.38XX</th> <th>Vehicle</th> <th>Position</th> </tr> </thead> <tbody> <tr> <td>GREY/BLACK</td> <td>GREEN/GREY pos.3</td> <td>12 way black connector</td> </tr> <tr> <td>YELLOW/BLACK</td> <td>GREEN/VIOLET pos.9</td> <td>12 way black connector</td> </tr> <tr> <td>VIOLET/WHITE</td> <td>ground</td> <td>car body</td> </tr> <tr> <td>ORANGE</td> <td>ground</td> <td>car body</td> </tr> <tr> <td>VIOLET</td> <td>ground</td> <td>car body</td> </tr> <tr> <td>ORANGE/WHITE</td> <td>ground</td> <td>car body</td> </tr> </tbody> </table> <p>The connections of the GREEN/GREY and GREEN/VIOLET wires must be done in the 12 way black connector coming out of the central doors locking unit located under the moquette on front of the driver's side seat.</p> <p>When finishing the programmation, cut the GREEN/VIOLET wire at the position nr. 7 of the 12 way black connector of the central inside the driver's side door.</p>	Art.38XX	Vehicle	Position	GREY/BLACK	GREEN/GREY pos.3	12 way black connector	YELLOW/BLACK	GREEN/VIOLET pos.9	12 way black connector	VIOLET/WHITE	ground	car body	ORANGE	ground	car body	VIOLET	ground	car body	ORANGE/WHITE	ground	car body
Art.38XX	Vehicle	Position																				
GREY/BLACK	GREEN/GREY pos.3	12 way black connector																				
YELLOW/BLACK	GREEN/VIOLET pos.9	12 way black connector																				
VIOLET/WHITE	ground	car body																				
ORANGE	ground	car body																				
VIOLET	ground	car body																				
ORANGE/WHITE	ground	car body																				
IMMOBILISATION POINT	<p>Fuel pump</p> <p>Cut the 2,5 mm² RED/BLUE wire located at the position nr. 32, placed in the fuse box.</p>																					
STARTER	+50: Cut the 2,5 mm ² RED/BLACK wire located in the wiring harness coming out of the ignition key.																					
BONNET SWITCH	Connect to the BROWN/VIOLET wire located at the position nr. 20, in the 20 way red connector located under the moquette, on front of the driver's side seat.																					
DOORS SWITCH	Connect to the BROWN/WHITE wire located at the position nr. 2, in the 12 way black connector, coming out of the central doors locking unit placed under the moquette, on front of the driver's side seat.																					

FITTING DIAGRAM NR.181

Diagram for direction indicators connection with separated lines on
AUDI A4 year 2003

