

MAKE	AUDI	MOD.	A4	YEAR.	03 →	PETROL	<input type="checkbox"/>	DIESEL	<input checked="" type="checkbox"/>
<b>ALARM/SIREN POSITION</b>	Position the compact alarms and the sirens in the windshield wiper compartment, passenger's side, near the battery.								
<b>CENTRAL UNIT POSITION</b>	The modular systems and the modules should be positioned under the moquette, on front of the driver's side seat, near the black box of the central doors locking unit.								
<b>POWER SUPPLY</b>	<p><b>+30:</b> connect to the original shunting with a 6 mm<sup>2</sup> cable terminal located behind the black multifunction central unit, placed in an horizontal position, driver's side.</p> <p><b>-31:</b> Connect directly to the original shunting with a 6 mm<sup>2</sup> cable terminal located behind the left lateral side on the base of the pillar, driver's side.</p>								
<b>IGNITION WIRE</b>	<b>+15/54:</b> Connect to the 2,5 mm <sup>2</sup> BLACK wire located in the wiring harness coming out of the ignition key.								
<b>DIRECTION INDICATORS</b>	Connect to the BLACK/GREEN wire at the position nr.4, to the BLUE/BLACK wire at the position nr. 9, to the GREEN/BLACK wire at the position nr. 7, to the GREEN/BLUE at the position nr. 6 located in the black connector and to the BLACK/BLUE wire at the position nr. 22 and to the BLACK/GREEN wire at the position nr. 21 located in the grey connector. The connectors are located on the coming out of the central fixed under the dashboard, driver's side. Refer to the <b>fitting diagram nr. 181</b> .								
<b>ELECTRIC WINDOWS</b>	<p><b>Comfort closing</b>  <b>Negative control signal</b>            The closing of the electric windows is obtained timing the BLUE/WHITE wire located at the position nr. 8, placed in the 12 way black connector, coming out of the central incorporated to the windows motor, inside the driver's side door.</p>								
<b>CENTRAL DOORS LOCKING</b>	<p><b>Negative control signal</b>            Connect to the BLUE/WHITE wire, at the position nr. 8 for the closing and to the VIOLET/GREEN wire, at the position nr. 7 located in the 12 way black connector, coming out of the central incorporated to the windows motor, inside the driver's side door.</p>								
<b>IMMOBILISATION POINT</b>	<b>Gasoil pump</b> Cut the 2,5 mm <sup>2</sup> RED/GREEN wire located at the position nr. 32, placed in the fuse box.								
<b>STARTER</b>	<b>+50:</b> Cut the 2,5 mm <sup>2</sup> RED/BLACK wire located in the wiring harness coming out of the ignition key.								
<b>BONNET SWITCH</b>	Connect to the BROWN/VIOLET wire located at the position nr. 20, in the 20 way red connector located under the moquette, on front of the driver's side seat.								
<b>DOORS SWITCH</b>	Connect to the BROWN/WHITE wire located at the position nr. 2, in the 12 way black connector, coming out of the central doors locking unit placed under the moquette, on front of the driver's side seat.								
<b>BOOT SWITCH</b>	Connect to the WHITE/YELLOW wire located at the position nr. 16, of the 16 way light brown connector, coming out of the central doors locking unit placed under the moquette, on front of the driver's side seat.								

**FITTING DIAGRAM NR.181**

Diagram for direction indicators connection with separated lines on  
**AUDI A4** year 2003

