



## SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00

www.cobra.it

MAKE **AUDI** MOD. **A4\*** YEAR. **03** → PETROL   
DIESEL

\* Models with original equipment keyless entry system.

<b>ALARM/SIREN POSITION</b>	Position the compact alarms and the sirens in the windshield wiper compartment, near the battery.																								
<b>CENTRAL UNIT POSITION</b>	The modular systems and the modules should be positioned under the moquette, on front of the driver's side seat, near the black box of the central doors locking unit.																								
<b>POWER SUPPLY</b>	<b>+30:</b> connect to the original shunting with a 6 mm <sup>2</sup> cable terminal located behind the black multifunction central unit, placed in an horizontal position, driver's side. <b>- 31:</b> Connect directly to the original shunting with a 6 mm <sup>2</sup> cable terminal located behind the left lateral side on the base of the pillar, driver's side.																								
<b>IGNITION WIRE</b>	<b>+15/54:</b> Connect to the 2,5 mm <sup>2</sup> BLACK wire located in the wiring harness coming out of the ignition key.																								
<b>DIRECTION INDICATORS</b>	Connect to the BLACK/GREEN wire at the position nr.4, to the BLUE/BLACK wire at the position nr. 9, to the GREEN/BLACK wire at the position nr. 7, to the GREEN/BLUE at the position nr. 6 located in the black connector and to the BLACK/BLUE wire at the position nr. 22 and to the BLACK/GREEN wire at the position nr. 21 located in the grey connector. The connectors are located on the coming out of the central fixed under the dashboard, driver's side. Refer to the <b>fitting diagram nr. 181</b> .																								
<b>ELECTRIC WINDOWS</b>	<b>Negative control signal</b> The closing of the electric windows is obtained timing the BLUE/WHITE wire located at the position nr. 8, placed in the 12 way black connector coming out of the central incorporated to the windows motor, inside the driver's side door.																								
<b>ACTIVAT./DEACTIVATION CONTROLS</b>	<table border="0"> <thead> <tr> <th colspan="3"><b>Connections antitheft/vehicle</b></th> </tr> <tr> <th><b>Art.3800</b></th> <th><b>Vehicle</b></th> <th><b>Position</b></th> </tr> </thead> <tbody> <tr> <td>GREY/BLACK</td> <td>GREEN/GREY pos.3</td> <td>12 way black connector</td> </tr> <tr> <td>YELLOW/BLACK</td> <td>GREEN/VIOLET pos.9</td> <td>12 way black connector</td> </tr> <tr> <td>VIOLET/WHITE</td> <td>ground</td> <td>car body</td> </tr> <tr> <td>ORANGE</td> <td>ground</td> <td>car body</td> </tr> <tr> <td>VIOLET</td> <td>ground</td> <td>car body</td> </tr> <tr> <td>ORANGE/WHITE</td> <td>ground</td> <td>car body</td> </tr> </tbody> </table> <p>The connections of the GREEN/GREY and GREEN/VIOLET wires must be done in the 12 way black connector coming out of the central doors locking unit located under the moquette on front of the driver's side seat. When finishing the programmation, cut the GREEN/VIOLET wire at the position nr. 7 of the 12 way black connector of the central inside the driver's side door.</p>	<b>Connections antitheft/vehicle</b>			<b>Art.3800</b>	<b>Vehicle</b>	<b>Position</b>	GREY/BLACK	GREEN/GREY pos.3	12 way black connector	YELLOW/BLACK	GREEN/VIOLET pos.9	12 way black connector	VIOLET/WHITE	ground	car body	ORANGE	ground	car body	VIOLET	ground	car body	ORANGE/WHITE	ground	car body
<b>Connections antitheft/vehicle</b>																									
<b>Art.3800</b>	<b>Vehicle</b>	<b>Position</b>																							
GREY/BLACK	GREEN/GREY pos.3	12 way black connector																							
YELLOW/BLACK	GREEN/VIOLET pos.9	12 way black connector																							
VIOLET/WHITE	ground	car body																							
ORANGE	ground	car body																							
VIOLET	ground	car body																							
ORANGE/WHITE	ground	car body																							
<b>IMMOBILISATION POINT</b>	<b>Gasoil pump</b> Cut the 2,5 mm <sup>2</sup> RED/GREEN wire located at the position nr. 32, placed in the fuse box.																								
<b>STARTER</b>	<b>+50:</b> Cut the 2,5 mm <sup>2</sup> RED/BLACK wire located in the wiring harness coming out of the ignition key.																								
<b>BONNET SWITCH</b>	Connect to the BROWN/VIOLET wire located at the position nr. 20, in the 20 way red connector located under the moquette, on front of the driver's side seat.																								
<b>DOORS SWITCH</b>	Connect to the BROWN/WHITE wire located at the position nr. 2, in the 12 way black connector, coming out of the central doors locking unit placed under the moquette, on front of the driver's side seat.																								
<b>BOOT SWITCH</b>	Connect to the WHITE/YELLOW wire located at the position nr. 16, of the 16 way light brown connector, coming out of the central doors locking unit placed under the moquette, on front of the driver's side seat.																								

**FITTING DIAGRAM NR.181**

Diagram for direction indicators connection with separated lines on  
**AUDI A4** year 2003

