



## CAR SECURITY

### SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00

www.cobra.it

MAKE **AUDI** MOD. **A4\*** YEAR **98** → PETROL   
DIESEL

\* Models with original equipment keyless entry system

<b>ALARM/SIREN POSITION</b>	Position the compact alarms and the sirens in the engine compartment, behind the left lateral headlamp.
<b>CENTRAL UNIT POSITION</b>	Position the modular systems and the modules under the dashboard, driver's side, on the left of the steering column.
<b>POWER SUPPLY</b>	+ <b>30</b> : connect to the 4 mm <sup>2</sup> RED wire located in a 2 way connector in the fuse box. - <b>31</b> : connect to one of the wires coming out of the grounding shunt up on the left lateral panel, driver's side.
<b>IGNITION WIRE</b>	+ <b>15/54</b> : connect with a terminal to the pivot marked 15A located on the relayholder plate under the dashboard, driver's side.
<b>DIRECTION INDICATORS</b>	Connect to the 1,5 mm <sup>2</sup> WHITE/BLACK and GREEN/BLACK wires located in the wiring harness coming out of the 3 way black connector, behind the left covering, driver's side.
<b>ALARM CONTROLS</b>	<b>Negative control signal</b> Connect to the RED/BLACK wire at the position nr. 11 of the 12 way black connector for the setting off and to the RED/BLUE or RED/BROWN wire at the position nr. 15 of the 16 way brown connector for the insertion. Both the connectors are located directly on the coming out of the original compressor.
<b>IMMOBILISATION POINT 1</b>	<b>Gasoil pump</b> Cut the 1,5 mm <sup>2</sup> BLUE/BLACK wire located in the wiring harness coming out of the 3 way connector directly on the gas oil pump in the engine compartment.
<b>STARTER</b>	+ <b>50</b> : Cut the 2 mm <sup>2</sup> RED/BLACK wire located in the brown/violet connector on the rear of the relay marked 205 under the dashboard, driver's side.
<b>BONNET SWITCH</b>	Install an additional switch on the headlamp support plate, near the left headlamp.
<b>DOORS SWITCH</b>	To obtain the doors protection: (front door passenger's side, rear doors driver's and passenger's sides) connect the 0,5 mm <sup>2</sup> BROWN/WHITE wire located at the position nr. 7 of the 15 way brown connector to the base of the pillar, driver's side. Connect to the BROWN/YELLOW wire located at the position nr. 8 of the above mentioned connector to obtain the protection of the front door, driver's side.
<b>BOOT SWITCH</b>	Connect to the BROWN/BLUE wire located at the position nr. 2 of the 16 way brown connector coming out of the compressor.