



CAR SECURITY

SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00

www.cobra.it

MAKE	MOD.	YEAR	PETROL DIESEL
AUDI	T T	00 →	<input checked="" type="checkbox"/> <input type="checkbox"/>
ALARM/SIREN POSITION	Position the compact alarms and the sirens in the engine compartment, on the ABS unit.		
CENTRAL UNIT POSITION	Position the modular systems and the modules on the left-hand side under the dashboard on the driver's side.		
POWER SUPPLY	+ 30 : connect to the 5 mm ² RED wire located at the entrance of the fuse box. - 31 : connect with a ring terminal directly to the car body.		
IGNITION WIRE	+ 15/54 : connect to the BLACK wire at the position nr. 5 in the red connector located behind the lateral bulkhead, driver's side.		
DIRECTION INDICATORS	Connect to the GREEN/BLACK and WHITE/BLACK wires located in the wiring harness under the sill cover, driver's side.		
ELECTRIC WINDOWS	Comfort closing Negative control signal The closing of the windows is obtained timing the doors closure wire.		
CENTRAL DOORS LOCKING	Negative control signal Connect to the VIOLET/GREY (lock) and RED/GREY (unlock) wires located in the brown connector under the dash board, driver's side.		
IMMOBILISATION POINT 1	Fuel pump Cut the BLACK/VIOLET wire coming out of the fuse marked nr. 29 located under the dash board, driver's side.		
STARTER	+ 50 : Cut the BLACK/RED wire located in the wiring harness coming out of the connector of the ignition switch.		
BONNET SWITCH	Install an additional switch on the headlamp support plate, near the original bonnet bumper rubber.		
DOORS SWITCH	Connect to the GREEN/YELLOW wire at the position nr. 6 of the light brown connector, behind the covering panels of the driver's side and passenger's side.		
BOOT SWITCH	Connect to the BLACK/BLUE wire directly on the coming out of the boot lamp. The signal is with a positive polarity so reverse the signal with a relè		