



CAR SECURITY

SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00

www.cobra.it

MAKE **CHRYSLER** MOD. **PT CRUISER*** YEAR. **01** → PETROL DIESEL

* Models with original equipment keyless entry system.

ALARM/SIREN POSITION Position the compact alarms and the sirens on the support of the servobrake, in the engine compartment.

CENTRAL UNIT POSITION Position the modular systems and the modules under the dashboard, driver's side.

POWER SUPPLY + 30: Connect to the 3 mm² RED wire located in a multiway connector, in the fuse box.
- 31: Connect to one of the ground terminals located behind the lateral panel, driver's side.

IGNITION WIRE + 15/54: Connect to the BLUE/BLACK wire, at the position nr. 22, located in the 26 way black connector coming out of the central doors locking unit fixed under the upper cover of the dashboard, near the air spouts above the auto radio.

DIRECTION INDICATORS Connect to the GREEN/RED wires, at the position nr. 1, of the 26 way black connector coming out of the central doors locking unit fixed under the upper cover of the dashboard, near the air spouts above the auto radio.

ELECTRIC WINDOWS **Positive control signal**
Front window, driver's side:
cut the LIGHT BLUE wire located at the position nr. 14.
Front window, passenger's side:
cut the BROWN/LIGHT BLUE wire located at the position nr. 7.
Rear window, driver's side:
cut the LIGHT BLUE/WHITE wire at the position nr. 8.
Rear window, passenger's side:
cut the GREY/BLACK wire at the position nr. 1.
These wires are located in the 14 way black connector coming out of the push-button panel of the electric windows.

ACTIVAT./DEACTIVATION CONTROLS **Connections antithefts/vehicle**

Art. 3800	Vehicle	Position
YELLOW/BLACK	PINK/BLACK	pos. nr. 5
GREY/BLACK	ORANGE/BLACK	pos. nr. 4
VIOLET	GREEN	pos. nr. 12
ORANGE	GREEN/WHITE	pos. nr. 11
VIOLET/WHITE	ground	car body
ORANGE/WHITE	positive	supply in the fuse box

Make connections in the 26 way black connector, on the radio central placed in the upper part at the center of the dashboard.

IMMOBILISATION POINT **Fuel pump**
Cut the BLUE/BLACK wire located in the 6 way black connector coming out of the central of the original locking device placed near the ignition key.

STARTER +50: Cut the YELLOW wire, at the position nr. 6, in the 10 way black connector located on the left of the steering column.

BONNET SWITCH Install an additional switch on the front headlamp support plate, driver's side.

DOORS SWITCH Connect to the BLUE/ORANGE wire, at the position nr. 7, and to the LIGHT BROWN wire, at the position nr. 25, in the 26 way black connector coming out of the central doors locking unit fixed under the upper cover of the dashboard, near the air spouts, above the auto radio. To make this connection it is necessary to divide the lines by means of two diodes.

BOOT SWITCH Connect to the LIGHT BROWN/BLACK wire, at the position nr. 14, of the 26 way connector coming out of the central doors locking unit fixed under the upper cover of the dashboard, near the air spouts, above the auto radio.