



CAR SECURITY

SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00

www.cobra.it

MAKE

DAIHATSU

MOD.

TERIOS

YEAR

99 →

PETROL
DIESEL

ALARM/SIREN POSITION	Position the compact alarms and the sirens in the engine compartment, on the bulkhead that divides the engine compartment from the passenger's compartment.
CENTRAL UNIT POSITION	Position the modular systems and the modules under the dashboard, driver's side.
POWER SUPPLY	+ 30 : connect to the 3 mm ² RED wire located in the multiway connector, at the entrance of the fuse box. - 31 : connect with a ring terminal directly to the car body.
IGNITION WIRE	+ 15/54 : connect to the 1,5 mm ² WHITE/RED wire located in the wiring harness behind the sill cover, driver's side.
DIRECTION INDICATORS	Connect to the GREEN/BLACK wire with SILVER reference and to the GREEN wire with SILVER reference in the wiring harness behind the sill cover, driver's side.
ELECTRIC WINDOWS	Positive control signal Front window, driver's side: cut the 2 mm ² PINK wire located in the wiring harness inside the driver's side door. Front window, passenger's side: cut the 2 mm ² GREEN/YELLOW wire located in the wiring harness coming out of the driver's side door.
CENTRAL DOORS LOCKING	Original door motor direct control Cut the 1,5 mm ² light BLUE wire (unlock) and light BLUE/BLACK wire (lock) located in the wiring harness coming out of the connector of the driver's side door. Refer to the diagram nr. 87 for the serie Bridge antithefts or to the diagram nr. 87A for the serie 3100 antithefts.
IMMOBILISATION POINT 1	Fuel pump Cut the 1 mm ² RED wire with SILVER reference located in the wiring harness behind the sill cover, driver's side.
STARTER	+ 50 : Cut the 2 mm ² RED/BLACK wire located in the wiring harness coming out of the ignition key.
BONNET SWITCH	Install an additional switch on the headlamp support plate, near the headlamp.
DOORS AND BOOT SWITCH	Connect to the 1 mm ² WHITE/BLUE wire located in the wiring harness behind the sill cover, driver's side.



CAR SECURITY


SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00

www.cobra.it

FITTING DIAGRAM N°87

Diagram to make the central doors locking on
DAIHATSU TERIOS mod. 2000
(for serie Bridge antithefts)

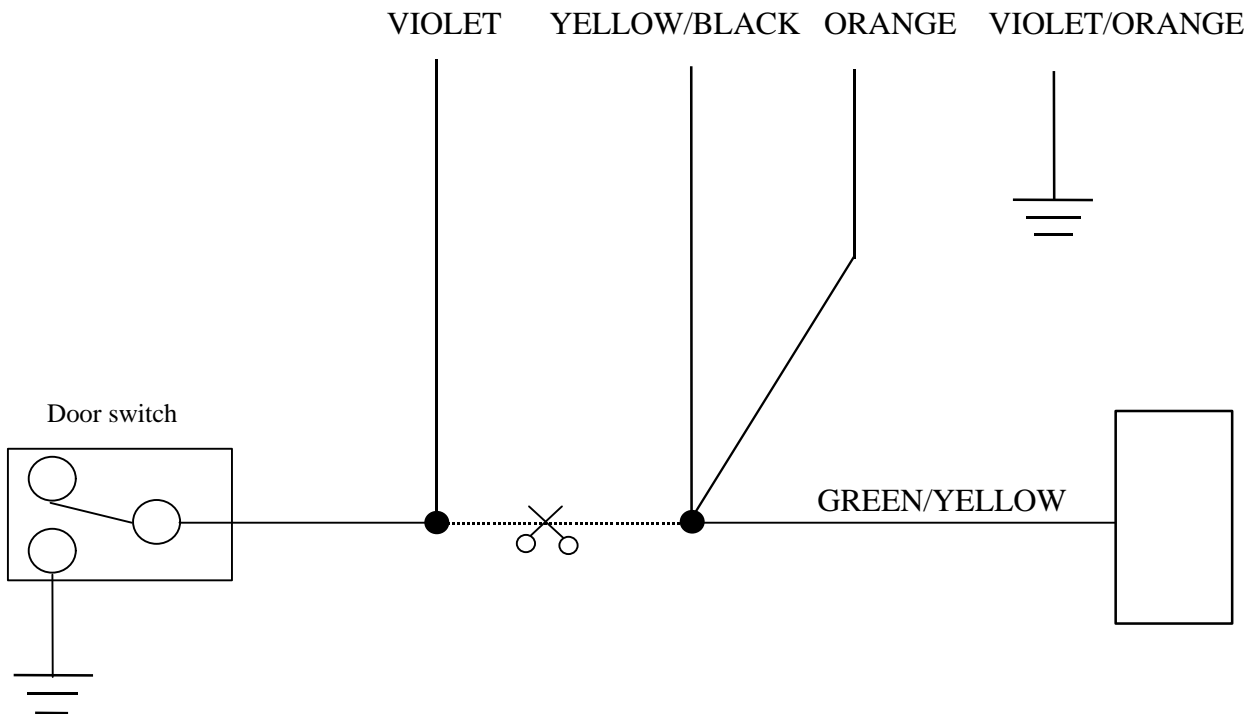

The above mentioned wire is located in the wiring harness coming out of the connector of the driver's side door.

