



## CAR SECURITY

### SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00

www.cobra.it

MAKE **FIAT** MOD. **BRAVA\*** YEAR **02** → PETROL  DIESEL

\* Models with original equipment keyless entry system.

**ALARM/SIREN POSITION** Position the compact alarms and the sirens in the engine compartment, behind the headlamp on the driver's side, near the battery.

**CENTRAL UNIT** Position the modular systems and the modules under the left side of the dashboard, driver's side.

**POWER SUPPLY** + 30: connect to the 4 mm<sup>2</sup> RED wire located in the 2 way white connector in the fuse box.  
- 31: connect to the general supply wiring located behind the left lateral bulkhead, drivers side.

**IGNITION WIRE** + 15/54: connect to the 1,5 mm<sup>2</sup> ORANGE wire located in the wiring harness and coming out of the ignition key, alternatively to the 1mm<sup>2</sup> BLUE/RED wire located in the multiway connector in the fuse box.

**DIRECTION INDICATORS** Connect to the LIGHT BLUE wire in the 12 way white connector in the lower part, on the right of the fuse box, and to the LIGHT BLUE/WHITE wire in the 14 way white connector, on the right of the fuse box.

**ELECTRIC WINDOWS** **Positive control signal**  
**Front window, driver's side:**  
cut the VIOLET/YELLOW wire at the position nr. 8, in the 20 way white connector, of the ABI central located behind the glove compartment, passenger's side.  
**Front window, passenger's side:**  
cut the VIOLET/WHITE wire at the position nr. 9, in the 20 way white connector of the ABI central located behind the glove compartment, passenger's side.

**ACTIVAT./DEACTIVATION CONTROLS** **Connections antitheft/vehicle**

Art.3800	Vehicle	Position
GREY/BLACK	free position	Pin nr.1, 8 way connector
YELLOW/BLACK	+30	in the fuse box
VIOLET	+30	in the fuse box
ORANGE	+30	in the fuse box
ORANGE/WHITE	+30	in the fuse box
VIOLET/WHITE	+30	in the fuse box

The 8 way connector of the radio set is located in the original front roof lamp.

**IMMOBILISATION POINT** **Fuel pump**  
Cut the 1,5 mm<sup>2</sup> BROWN/WHITE wire located in the white connector of the right lower part of the fuse box.

**STARTER** +50: Cut the YELLOW/BLACK wire located in the wiring harness coming out of the connector of the ignition key.

**BONNET SWITCH** Install an additional switch on the front headlamp support plate, near the rubber grommet of the boot.

**DOORS SWITCH** Connect to the BROWN/BLACK wire at the position nr. 2 (ant. left) and to the BROWN/GREY wire at the position nr. 3 (ant. right) located in the wiring harness coming out of the 18 way connector, on the coming out of the ABI central, behind the glove compartment, passenger's side.

**BOOT SWITCH** Connect to the wire located at the position nr. 14, in the 20 way white connector placed in the upper part of the fuse box.