



CAR SECURITY

SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00

www.cobra.it

MAKE	FIAT	MOD.	BRAVA	YEAR	97 →	PETROL	<input checked="" type="checkbox"/>	DIESEL	<input type="checkbox"/>
ALARM/SIREN POSITION	Position the compact alarms and the sirens in the engine compartment behind the headlamp on the drivers side, near the battery.								
POWER SUPPLY	+ 30: connect to the 4 mm ² RED wire located in the 2 way white connector in the fuse box. - 31: connect to the general supply wiring located behind the left lateral bulkhead, drivers side.								
IGNITION WIRE	+ 15/54: connect to the 1,5 mm ² ORANGE wire located in the wiring harness and coming out of the ignition key, alternatively to the 1mm ² BLUE/RED wire located in the multiway connector in the fuse box.								
DIRECTION INDICATORS	Connect to the LIGHT BLUE wires in the 12 way connector down on the right of the fuse box and to the LIGHT BLUE/WHITE wire in the 14 way white connector on the right of the fuse box.								
ELECTRIC WINDOWS	Positive control signal Front window, driver's side: cut the WHITE/RED wire coming out of the relevant original window switch. Front window, passenger's side: cut the RED/GREEN wire coming out of the relevant original window switch.								
CENTRAL DOORS LOCKING	Negative control signal Connect to the 0,75 mm ² WHITE wire (lock) and BLUE wire (unlock) located in the bundle of cables coming out of the drivers side door, at the rear of the fuse box.								
IMMOBILISATION POINT	Fuel pump Cut the 1,5 mm ² BROWN/WHITE wire located in the white connector of the right lower part of the fuse box.								
BONNET SWITCH	Install an additional switch on the front headlamp support plate, near the rubber grommet of the boot.								
DOORS SWITCH	Connect to the 1 mm ² WHITE/RED wire located near the core hitch of the drivers side door.								
BOOT SWITCH	Connect to the 1 mm ² BLACK/VIOLET wire of the switch original line.								