



CAR SECURITY

SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00

www.cobra.it

MAKE

FIAT

MOD.

DOBLO'

YEAR.

01 →

PETROL
DIESEL

ALARM/SIREN POSITION

Position the compact alarms and the sirens in the engine compartment, on the support of the shock absorber, passenger's side. Pass the cables through one of the presetting located in the original rubber sleeve near the valve of the servobrake.

CENTRAL UNIT POSITION

Position the modular systems and the modules under the dashboard, driver's side.

POWER SUPPLY

+ 30: connect to the 4 mm² RED wire located in a multiway connector in the fuse box.
- 31: connect to one of the original ground terminal located behind the left lateral bulkhead, driver's side.

IGNITION WIRE

Connect to the ORANGE wire at the position nr. 14 in the 20 way brown connector located in the former part of the fuse box, under, on the left of the dashboard, driver's side.

DIRECTION INDICATORS

Connect to the RED/GREEN wire located at the position nr. 12 in the 40 way black connector, located in the former part, of the fuse box, under, on the left of the dashboard, driver's side.

ELECTRIC WINDOWS

Negative control signal

Front window, driver's side:

cut the YELLOW/GREEN wire.

Front window, passenger's side:

cut the LIGHT BLUE/BLACK wire.

These connections are made in the wiring harness coming out of the respective original switches in the central part of the dashboard under the presetting of the car radio.

CENTRAL DOORS LOCKING

Negative control signal

Connect to the BLACK/LIGHT BLUE wire located at the position nr. 17 (unlock) and to the WHITE/BLACK wire located at the position nr. 35 (lock) placed in the wiring harness coming out of the 40 way black connector located in the former part of the fuse box, under, on the left of the dashboard, driver's side.

IMMOBILISATION POINT 1

Gasoil pump

Cut the BROWN wire located in the wiring harness coming out of the connector of the inertial switch placed behind the lateral panel, passenger's side.

STARTER CUT OFF

+50: Cut the BROWN wire located in the wiring harness coming out of the connector of the ignition key.

BONNET SWITCH

Install an additional switch on the front headlamp support plate, driver's side.

DOORS SWITCH

Connect to the LIGHT BLUE/YELLOW wire located at the position nr. 21 on the coming out of the 40 way black connector placed in the former part of the fuse box, under, on the left of the dashboard, driver's side.

BOOT SWITCH

Connect to the RED/GREEN wire located at the position nr. 36 coming out of the 40 way black connector placed in the former part of the fuse box, under, on the left of the dashboard, driver's side.