



CAR SECURITY

SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00

www.cobra.it

MAKE **FIAT** MOD. **DOBLO' *** YEAR. **02** → PETROL DIESEL

* Models with original equipment keyless entry system

ALARM/SIREN POSITION Position the compact alarms and the sirens in the engine compartment, on the support of the shock absorber, passenger's side. Pass the cables through one of the presetting located in the original rubber sleeve near the valve of the servobrake.

CENTRAL UNIT POSITION Position the modular systems and the modules under the dashboard, driver's side.

POWER SUPPLY + 30: connect to the 4 mm² RED wire located in a multiway connector in the fuse box.
- 31: connect to one of the original ground terminal located behind the left lateral bulkhead, driver's side.

IGNITION WIRE Connect to the ORANGE wire at the position nr. 14 in the 20 way brown connector located in the former part of the fuse box, under, on the left of the dashboard, driver's side.

DIRECTION INDICATORS Connect to the RED/GREEN wire located at the position nr. 12 in the 40 way black connector, located in the former part, of the fuse box, under, on the left of the dashboard, driver's side.

ELECTRIC WINDOWS **Negative control signal**
Front window, driver's side:
cut the YELLOW/GREEN wire.
Front window, passenger's side:
cut the LIGHT BLUE/BLACK wire.
These connections are made in the wiring harness coming out of the respective original switches in the central part of the dashboard under the presetting of the car radio.

ACTIVAT./DEACTIVATION CONTROLS **Connections antitheft/vehicle**

Art.3800	Vehicle	Position
GREY/BLACK	free position	Pin nr.1, 8 way connector
YELLOW/BLACK	+30	in the fuse box
VIOLET	+30	in the fuse box
ORANGE	+30	in the fuse box
ORANGE/WHITE	+30	in the fuse box
VIOLET/WHITE	+30	in the fuse box

The 8 way connector of the radio set is located in the original front roof lamp.

IMMOBILISATION POINT1 **Gasoil pump**
Cut the BROWN wire located in the wiring harness coming out of the connector of the inertial switch placed behind the lateral panel, passenger's side.

STARTER +50: Cut the BROWN wire located in the wiring harness coming out of the connector of the ignition key.

BONNET SWITCH Install an additional switch on the front headlamp support plate, driver's side.

DOORS SWITCH Connect to the LIGHT BLUE/YELLOW wire located at the position nr. 21 on the coming out of the 40 way black connector placed in the former part of the fuse box, under, on the left of the dashboard, driver's side.

BOOT SWITCH Connect to the RED/GREEN wire located at the position nr. 36 coming out of the 40 way black connector placed in the former part of the fuse box, under, on the left of the dashboard, driver's side.