



CAR SECURITY

SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00

www.cobra.it

MAKE **FIAT** MOD. **MAREA*** YEAR **02** → PETROL DIESEL

* Models with original equipment keyless entry system.

ALARM/SIREN POSITION Position the compact alarms and the sirens in the engine compartment, behind the headlamp on the driver's side, near the battery.

CENTRAL UNIT Position the modular systems and the modules under the left side of the dashboard, driver's side.

POWER SUPPLY + 30: connect to the 4 mm² RED wire located in the 2 way white connector in the fuse box.
- 31: connect to the general supply wiring located behind the left lateral bulkhead, drivers side.

IGNITION WIRE + 15/54: connect to the 1,5 mm² ORANGE wire located in the wiring harness and coming out of the ignition key, alternatively to the 1mm² BLUE/RED wire located in the multiway connector in the fuse box.

DIRECTION INDICATORS Connect to the LIGHT BLUE wire in the 12 way white connector in the lower part, on the right, of the fuse box, and to the LIGHT BLUE/WHITE wire in the 14 way white connector, on the right of the fuse box.

ELECTRIC WINDOWS **Positive control signal**
Front window, driver's side:
cut the VIOLET/YELLOW wire at the position nr. 8, in the 20 way white connector, of the ABI central located behind the glove compartment, passenger's side.
Front window, passenger's side:
cut the VIOLET/WHITE wire at the position nr. 9, in the 20 way white connector of the ABI central located behind the glove compartment, passenger's side.

ACTIVAT./DEACTIVATION CONTROLS **Connections antitheft/vehicle**

| Art.3800 | Vehicle | Position |
|--------------|---------------|---------------------------|
| GREY/BLACK | free position | Pin nr.1, 8 way connector |
| YELLOW/BLACK | +30 | in the fuse box |
| VIOLET | +30 | in the fuse box |
| ORANGE | +30 | in the fuse box |
| ORANGE/WHITE | +30 | in the fuse box |
| VIOLET/WHITE | +30 | in the fuse box |

The 8 way connector of the radio set is located in the original front roof lamp.

IMMOBILISATION POINT **Fuel pump**
Cut the 1,5 mm² BROWN/WHITE wire located in the white connector of the right lower part of the fuse box.

STARTER +50: Cut the YELLOW/BLACK wire located in the wiring harness coming out of the connector of the ignition key.

BONNET SWITCH Install an additional switch on the front headlamp support plate, near the rubber grommet of the boot.

DOORS SWITCH Connect to the BROWN/BLACK wire at the position nr. 2 (ant. left) and to the BROWN/GREY wire at the position nr. 3 (ant. right) located in the wiring harness coming out of the 18 way connector, on the coming out of the ABI central, behind the glove compartment, passenger's side.

BOOT SWITCH Connect to the the 1mm² BLACK/VIOLET wire of the original push-buttons line or, to the wire at the position nr. 14, on the coming out of the 20 way white connector, in the upper part of the fuse box.