



## CAR SECURITY

### SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00

www.cobra.it

MAKE

**FIAT**

MOD.

**MULTIPLA\***

YEAR.

**02** →

PETROL   
DIESEL

\* Models with original equipment keyless entry system.

#### ALARM/SIREN POSITION

Position the compact alarms and the sirens on the support of the servobrake in the engine compartment.

#### CENTRAL UNIT POSITION

The modular systems and the modules should be positioned under the dashboard, driver's side.

#### POWER SUPPLY

**+30:** connect directly to the positive end of the battery.  
**-31:** connect directly to the car body.

#### IGNITION WIRE

**+15/54:** Connect to the 0,5 mm<sup>2</sup> LIGHT BLUE/WHITE wire located in the 18 way white connector, in the front part of the fuse box.

#### DIRECTION INDICATORS

Connect to the LIGHT BLUE wire located in the 12 way white/brown connector and to the LIGHT BLUE/BLACK wire located in the 14 way white/brown connector placed in the front part of the fuse box.

#### ELECTRIC WINDOWS

##### Positive control signal

##### Front window, driver's side:

cut the the GREY/BLACK wire located in the 18 way black located on the windows automatism central on the side of the fuse box.

##### Front window, passenger's side:

cut the YELLOW/BLUE wire located in the wiring harness coming out of the driver's side door.

#### ACTIVAT./DEACTIVATION CONTROLS

##### Connections antitheft/vehicle

##### Art.3800

YELLOW/BLACK

##### Vehicle

GREEN/BLACK

##### Position

0,50 mm<sup>2</sup> wire

GREY/BLACK

+30

standing positive in the fuse box

VIOLET

+30

standing positive in the fuse box

ORANGE

+30

standing positive in the fuse box

VIOLET/WHITE

+30

standing positive in the fuse box

ORANGE/WHITE

+30

standing positive in the fuse box

The GREEN/BLACK wire is located in the wiring harness coming out of the brown relay that actuate the direction indicators and is located behind the fuse box.

#### IMMOBILISATION POINT

##### Fuel pump

Cut the BROWN/WHITE wire located in the wiring harness coming out of the 14 way brown connector located in the front part of the fuse box.

#### STARTER

**+50:** Cut the RED wire located in the wiring harness coming out of the 3 way white connector of the ignition key.

#### BONNET SWITCH

Install an additional switch on the front headlamp support grill, driver's side.

#### DOORS SWITCH

Connect to the GREY and GREY/BROWN wires located in the wiring harness coming out of the 14 way brown connector placed in the frontal part of the fuse box.

#### BOOT SWITCH

Connect to the GREY/ BROWN wire located in the wiring harness coming out of the 12 way white connector placed in the left lateral part of the boot.