



SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00

www.cobra.it

MAKE **FIAT** MOD. **MULTIPLA*** YEAR. **03** → PETROL DIESEL

* Models with original equipment keyless entry system.

ALARM/SIREN POSITION	Position the compact alarms and the sirens on the support of the servobrake in the engine compartment.																					
CENTRAL UNIT POSITION	The modular systems and the modules should be positioned under the dashboard, driver's side.																					
POWER SUPPLY	+30: connect directly to the positive end of the battery. -31: connect directly to the car body.																					
IGNITION WIRE	+15/54: Connect to the 0,5 mm ² LIGHT BLUE/WHITE wire located in the 18 way white connector, in the front part of the fuse box.																					
DIRECTION INDICATORS	Connect to the LIGHT BLUE wire located in the 12 way white/brown connector and to the LIGHT BLUE/BLACK wire located in the 14 way white/brown connector placed in the front part of the fuse box.																					
ELECTRIC WINDOWS	Positive control signal Front window, driver's side: cut the the GREY/BLACK wire located in the 18 way black connector located on the windows automatism central on the side of the fuse box. Front window, passenger's side: cut the YELLOW/BLUE wire located in the wiring harness coming out of the driver's side door.																					
ACTIVAT./DEACTIVATION CONTROLS	<p>Connections antitheft/vehicle</p> <table border="0"> <thead> <tr> <th>Art.3800</th> <th>Vehicle</th> <th>Position</th> </tr> </thead> <tbody> <tr> <td>YELLOW/BLACK</td> <td>GREEN/BLACK</td> <td>connector brown relay</td> </tr> <tr> <td>GREY/BLACK</td> <td>+30</td> <td>standing positive in the fuse box</td> </tr> <tr> <td>VIOLET</td> <td>+30</td> <td>standing positive in the fuse box</td> </tr> <tr> <td>ORANGE</td> <td>+30</td> <td>standing positive in the fuse box</td> </tr> <tr> <td>VIOLET/WHITE</td> <td>+30</td> <td>standing positive in the fuse box</td> </tr> <tr> <td>ORANGE/WHITE</td> <td>+30</td> <td>standing positive in the fuse box</td> </tr> </tbody> </table> <p>The GREEN/BLACK wire is located in the wiring harness coming out of the brown relay that actuate the direction indicators and it is located behind the fuse box.</p>	Art.3800	Vehicle	Position	YELLOW/BLACK	GREEN/BLACK	connector brown relay	GREY/BLACK	+30	standing positive in the fuse box	VIOLET	+30	standing positive in the fuse box	ORANGE	+30	standing positive in the fuse box	VIOLET/WHITE	+30	standing positive in the fuse box	ORANGE/WHITE	+30	standing positive in the fuse box
Art.3800	Vehicle	Position																				
YELLOW/BLACK	GREEN/BLACK	connector brown relay																				
GREY/BLACK	+30	standing positive in the fuse box																				
VIOLET	+30	standing positive in the fuse box																				
ORANGE	+30	standing positive in the fuse box																				
VIOLET/WHITE	+30	standing positive in the fuse box																				
ORANGE/WHITE	+30	standing positive in the fuse box																				
IMMOBILISATION POINT	Fuel pump Cut the BROWN/WHITE wire located in the wiring harness coming out of the 14 way brown connector located in the front part of the fuse box.																					
STARTER	+50: Cut the RED wire located in the wiring harness coming out of the 3 way white connector of the ignition key.																					
BONNET SWITCH	Install an additional switch on the front headlamp support grill, driver's side.																					
DOORS SWITCH	Connect to the wires: GREY/WHITE (ant. right), WHITE/BLACK (ant. left), GREEN/BROWN (post. right), GREY/BLACK (post. left) located in the wiring harness behind the driver's side sill cover.																					
BOOT SWITCH	Connect to the GREY/BLUE wire located in the wiring harness behind the driver's side sill cover.																					