



## CAR SECURITY

### SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00

[www.cobra.it](http://www.cobra.it)

MAKE

**FIAT**

MOD.

**MULTIPLA**

YEAR

**99** →

PETROL   
DIESEL

#### ALARM/SIREN POSITION

Position the compact alarms and the sirens on the left side of the engine compartment between the steering column and the bulkhead that divides the engine compartment and the passenger's compartment.

#### CENTRAL UNIT POSITION

The modular systems and the modules should be positioned under the dashboard, driver's side.

#### POWER SUPPLY

+ **30**: connect to the 4 mm<sup>2</sup> RED wire located at the entrance of the fuse box.  
- **31**: connect to one of the 2 mm<sup>2</sup> BROWN wires located in the coming out of the original power supply behind the bulkhead of the driver's side.

#### IGNITION WIRE

+ **15/54**: connect to the 0,5 mm<sup>2</sup> LIGHT BLUE/WHITE wire located in the 18 way white connector in the front part of the fuse box.

#### DIRECTION INDICATORS

Connect to the LIGHT BLUE wire located in the 12 way WHITE/BROWN connector and to the LIGHT BLUE/BLACK wire located in the 14 way white/brown connector in the front part of the fuse box.

#### CENTRAL DOORS LOCKING

##### Negative control signal

Connect to the WHITE wire (lock) and light BLUE wire (unlock) located in the wiring harness coming out of the driver's side door.

#### IMMOBILISATION POINT 1

##### Fuel pump

Cut the 1 mm<sup>2</sup> BROWN/WHITE wire located in the 14 way brown connector in the front part of the fuse box

#### STARTER

+**50**: Cut the RED wire located in the 3 way white connector coming out of the ignition switch.

#### BONNET SWITCH

Install an additional switch on the front headlamp plate, near the bonnet stop rubber.

#### DOORS SWITCH

Connect to the GREY and GREY/BROWN wires located in the 14 way white/brown connector in the front part of the fuse box.

#### BOOT SWITCH

Connect to the GREY/BLUE wire located in the 12 way white connector in the boot, driver's side.