



CAR SECURITY

SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00

www.cobra.it

| MAKE | FIAT | MOD. | PANDA | YEAR | 99 → | PETROL | <input checked="" type="checkbox"/> | DIESEL | <input type="checkbox"/> |
|------------------------------|---|------|-------|------|------|--------|-------------------------------------|--------|--------------------------|
| ALARM/SIREN POSITION | Position the compact alarms and the sirens in the engine compartment near the support of the battery. Pass the cables through the original rubber sleeve located in the windshield wiper compartment, behind the black covering, driver's side. | | | | | | | | |
| CENTRAL UNIT POSITION | Position the modular systems and the modules under the dashboard, driver's side. | | | | | | | | |
| POWER SUPPLY | + 30 : connect to the 6 mm ² WHITE/RED wire located in the multiway connector in the fuse box. - 31 : connect with a ring terminal to the car body. | | | | | | | | |
| IGNITION WIRE | + 15/54 : connect to the BROWN wire located in the 6 way transparent connector near the connector of the direction indicators. | | | | | | | | |
| DIRECTION INDICATORS | Connect to the 1 mm ² LIGHT BLUE and LIGHT BLUE/BLACK wires in the 10 way white connector located under the steering column. | | | | | | | | |
| ELECTRIC WINDOWS | Positive control signal Front window, driver's side: cut the 2,5 mm ² WHITE/VIOLET wire coming out of the wiring harness of the serial push button. Front window, passenger's side: cut the 2,5 mm ² WHITE/BLACK wire located in the wiring harness coming out of the core hitch of the door, driver's side. | | | | | | | | |
| CENTRAL DOORS LOCKING | Negative control signal Connect to the BLUE wire (lock) and WHITE wire (unlock) in the wiring harness of the connector coming out of the driver's side door. | | | | | | | | |
| IMMOBILISATION POINT | Fuel pump Cut the BLACK/VIOLET wire located in the wiring harness coming out of the connector of the inertial switch. | | | | | | | | |
| STARTER | + 50 : Cut the 2 mm ² RED wire located in the wiring harness coming out of the connector of the ignition key. | | | | | | | | |
| BONNET SWITCH | Install an additional switch on the headlamp support plate. | | | | | | | | |
| DOORS SWITCH | Connect to the BLACK wire coming out of the serial push button. | | | | | | | | |
| BOOT SWITCH | Connect to the wire located in the wiring harness coming out of the connector of the boot lamp. | | | | | | | | |