



CAR SECURITY

SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00

www.cobra.it

MAKE

FIAT

MOD.

ULYSSE

YEAR

97 →

PETROL
DIESEL

ALARM/SIREN POSITION

Position the compact alarms and the sirens in the engine compartment, on the left of the lateral panel, driver's side. To pass the cables remove the yellow cap in the original core hitch located above on the left, on the passenger's side bulkhead that divides the engine compartment from the cabin.

POWER SUPPLY

+30: connect to the general supply wiring of the multiway connector in the fuse box.
- 31: connect with a ring terminal to one of the terminals coming out of the original power supply on the left side of driver's side.

IGNITION WIRE

+ 15/54: connect to the YELLOW wire at the first place in the left connector in the inner fuse box.

DIRECTION INDICATORS

Connect to the GREEN wire marked nr. 2346 at the position nr. 11 and to the GREEN wire marked nr. 2333 at the position nr. 12 located in the 23 way connector under the dashboard, passenger's side.

ELECTRIC WINDOWS

Positive control signal

Front window, driver's side:

cut the WHITE wire marked nr. 6050 located in the wiring harness directly inside the driver's side door.

Front window, passenger's side:

cut the WHITE wire marked nr. 607 located in the wiring harness coming out of the driver's side door.

CENTRAL DOORS LOCKING

Negative control signal

Connect to the ORANGE wire marked nr. 6290 (unlock) and to the ORANGE wire marked nr. 6291 at the position nr. 21 (lock) located in the wiring harness coming out of the 23 way black connector under the dashboard, driver's side.

IMMOBILISATION POINT 1

Fuel pump

Cut the ORANGE wire marked nr. 1206 located near the lower part of the servobrake oil tank, directly outgoing from the inertial switch.

IMMOBILISATION POINT 2

Electronic central unit

Cut the GREY wire marked nr. 1236 located in the wiring harness coming out of the electronic central unit on the left lateral panel in the engine compartment, passenger's side.

STARTER

+50: Cut the WHITE wire located in the black connector along the steering column.

BONNET SWITCH

Install an additional switch on the headlamp support plate, near the left headlamp.

DOORS AND BOOT SWITCH

Connect to the ORANGE wire marked nr. 4904 at the position nr. 8 located in the same 23 way connector above mentioned.