



CAR SECURITY

SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00

www.cobra.it

MAKE

FORD

MOD.

ESCORT

YEAR

97 →

PETROL
DIESEL

ALARM/SIREN POSITION

Position the compact alarms and the sirens on the support of the shock absorber, driver's side. The modular systems and the modules should be positioned behind the central tunnel. Pass the cables through the original rubber sleeve, (removing the moquette), located behind the servobrake.

POWER SUPPLY

+ **30**: connect to the 4 mm² RED wire located in the wiring harness coming out of the general supply connector of the fuse box.
- **31**: connect to the car body.

IGNITION WIRE

+ **15/54**: connect to the 1,5 mm² VIOLET/BLACK wire located in the wiring harness coming out of the connector (the most central in the fuse box).

DIRECTION INDICATORS

Connect to the 1,5 mm² BLUE/RED and BLUE/WHITE wires located in the wiring harness that goes from the lights switch to the fuse box.

ELECTRIC WINDOWS

Positive control signal

Front window, driver's side:

cut the 2 mm² YELLOW wire.

Front window, passenger's side:

cut the 2 mm² YELLOW/VIOLET wire.

These connections are made directly in the wiring harness coming out of the respective original switches located in the central tunnel.

CENTRAL DOORS LOCKING

Positive control signal

Connect to the 1,5 mm² WHITE/VIOLET wire (unlock) and to the YELLOW/BLACK wire (lock) located in the wiring harness behind the left panel, driver's side.

IMMOBILISATION POINT 1

Fuel pump

Cut the 1,5 mm² BLACK wire located in the wiring harness coming out of the multiway connector, the most central in the fuse box.

IMMOBILISATION POINT 2

Inertial switch

Cut the 1,5 mm² BLACK/RED wire located in the connector coming out of the inertial switch, behind the left lateral panel, driver's side.

STARTER

+**50**: Cut the BLACK/BLUE wire located in the wiring harness coming out of the 3 way connector, in the fuse box.

BONNET SWITCH

Install an additional switch on the headlamp support plate, near the original bonnet bumper rubber.

DOORS SWITCH

Connect to the 1 mm² BLACK/GREEN wire located in a multiway connector, under the fuse box.

BOOT SWITCH

Connect to the BLACK/ORANGE wire located in the wiring harness coming out of the boots interior lamp connector.