



## CAR SECURITY

### SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00

www.cobra.it

MAKE	<b>FORD</b>	MOD.	<b>FOCUS*</b>	YEAR.	<b>02 2<sup>nd</sup> sem.→</b>	PETROL	<input type="checkbox"/>
						DIESEL	<input checked="" type="checkbox"/>

\* Models with original equipment keyless entry system.

**ALARM/SIREN POSITION** Position the compact alarms and the sirens on the support of the shock absorber, driver's side.

**CENTRAL UNIT POSITION** Position the modular systems and the modules behind the fuse box, under the dashboard, passenger's side.

**POWER SUPPLY**  
+ 30: connect to the 6 mm<sup>2</sup> RED wire located in a multiway connector in the fuse box.  
- 31: connect to one of the ground terminals located on the left under the dashboard driver's side.

**IGNITION WIRE** + 15/54: connect to the GREY/ORANGE wire coming out of the ignition key.

**DIRECTION INDICATORS** Connect to the BLUE wire, at the position nr. 3 (or as alternative to the nr.12) and to the BLUE wire, at the position nr. 4 (or as alternative to the nr. 13) located in the light blue connector, on the central locking unit, behind the passenger's side glove compartment.

**ELECTRIC WINDOWS** The windows locking is obtained using the original radio control.

**ACTIVAT./DEACTIVATION CONTROLS**

Connections antitheft/vehicle	Art. 3800	Vehicle	Position
YELLOW/BLACK		YELLOW/BLACK	pos. nr. 3, green connector
GREY/BLACK		BLACK/WHITE	pos. nr. 5, green connector
VIOLET		BLACK/GREEN	pos. nr.16, green connector
ORANGE		positive	supply in the fuse box
VIOLET/WHITE		ground	car body
ORANGE/WHITE		positive	supply in the fuse box

**Refer to the B diagram of the dedicated installations manual located in the kit of the antitheft.**  
**Note:** the green connector is located on the GEM central unit behind the driver's side glove compartment.

**IMMOBILISATION POINT** **Gasoil pump**  
Cut the GREEN/BLACK wire located at the position nr. 3, in the 8 way white connector, fitted on the fuses box.

**STARTER** +50: Cut the 2,5 mm<sup>2</sup> GREY wire located in a multiway connector, in the fuse box.

**BONNET SWITCH** Install an additional switch on the headlamp support plate, driver's side.

**DOORS SWITCH**

**Perimetric connection with separated lines**  
connect to the BLACK/YELLOW wire in the white connector for the driver's side front door, to the BLACK/BLUE wire in the white connector for the passenger's side front door, to the BLACK/ORANGE wire in the green connector for the driver's side rear door and to the BLACK/GREEN wire in the grey connector for the passenger's side rear door.  
The connectors are located on the central locking, behind the passenger's side glove compartment.

**Perimetric connection directly to the ceiling lamp control**  
Connect to the BLACK/BLUE wire at the position nr. 3, in the dark grey connector, coming out of the central of the central locking unit located behind the passenger's side glove compartment.

**BOOT SWITCH** Connect to the BLACK/YELLOW wire, in the brown connector coming out of the central locking unit located behind the passenger's side glove compartment.