



SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00

www.cobra.it

MAKE	FORD	MOD.	FUSION	YEAR	02 →	PETROL <input checked="" type="checkbox"/>	DIESEL <input type="checkbox"/>
ALARM/SIREN POSITION	Position the compact alarms and the sirens behind the driver's side headlamp. Pass the cables through the rubber sleeve located on the bulkhead that divides the engine compartment and the passenger's compartment, on the left of the servobrake.						
CENTRAL UNIT POSITION	Position the modular systems and the modules under the driver's side dashboard.						
POWER SUPPLY	+30: connect to the positive that supplies the fuse box. - 31: connect to an original ground terminal located on the left, under the driver's side dashboard.						
IGNITION WIRE	+15/54: connect to the WHITE/GREEN wire at the position nr.1, in the black connector, above the brake pedal.						
DIRECTION INDICATORS	Connect to the BLUE wire, at the position nr. 7, and to the BLUE/RED wire, at the position nr.6, in the light blue connector, in the central under the steering column, driver's side						
ELECTRIC WINDOWS	Positive control signal Front window, driver's side: cut the WHITE wire in the 7 way black connector, in the original push buttons panel. Front window, passenger's side: cut the WHITE/VIOLET wire located in the wiring harness coming out of the driver's side door.						
CENTRAL DOORS LOCKING	Positive control signal Connect to the BLACK/RED wire at the position nr.9 in the green connector (lock) and to the BLACK/GREEN wire at the position nr. 12 in the dark grey connector (unlock). These connections must be done in the wiring harness coming out of the central placed on the left, under the steering column.						
IMMOBILISATION POINT	Inertial switch Cut the GREEN/ORANGE wire directly in the wiring harness coming out from the inertial switch, behind the passenger's side glove compartment.						
STARTER	+50: Cut the GREY/BLACK wire at the position nr.7, in the 7 way black connector, in the ignition key.						
BONNET SWITCH	Install an additional switch on the headlamp support plate, driver's side.						
DOORS AND BOOT SWITCHES	Connect to the BLACK/BLUE wire, at the position nr.3, in the dark grey connector, in the central under the driver's side steering column.						