



SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00

www.cobra.it

MAKE **FORD** MOD. **FUSION*** YEAR **02** → PETROL DIESEL

* Models with original equipment keyless entry system.

ALARM/SIREN POSITION Position the compact alarms and the sirens behind the driver's side headlamp. Pass the cables through the rubber sleeve located on the bulkhead that divides the engine compartment and the passenger's compartment, on the left of the servobrake.

CENTRAL UNIT POSITION Position the modular systems and the modules under the driver's side dashboard.

POWER SUPPLY +30: connect to the positive that supplies the fuse box.
- 31: connect to an original ground terminal located on the left, under the driver's side dashboard.

IGNITION WIRE +15/54: connect to the WHITE/GREEN wire at the position nr.1, in the black connector, above the brake pedal.

DIRECTION INDICATORS Connect to the BLUE wire, at the position nr. 7, and to the BLUE/RED wire, at the position nr.6, in the light blue connector, in the central under the steering column, driver's side

ELECTRIC WINDOWS **Positive control signal**
Front window, driver's side:
cut the WHITE wire in the 7 way black connector, in the original push buttons panel.
Front window, passenger's side:
cut the WHITE/VIOLET wire located in the wiring harness coming out of the driver's side door.

ACTIVAT./DEACTIVATION CONTROLS **Connections antitheft/vehicle**

Art. 3800	Vehicle	Position
YELLOW/BLACK	WHITE/RED	pos. nr. 4 in the green connector
GREY/BLACK	YELLOW/RED	pos. nr. 3 in the green connector
VIOLET	BLACK/RED	pos. nr. 9 in the green connector
ORANGE	BLACK/GREEN	pos. nr.12 in the dark grey connector
VIOLET/WHITE	ground	car body
ORANGE/WHITE	positive	supply in the fuse box

The above green and grey connectors are located in the coming out of the central locking unit placed under the steering column.
Refer to the 'C' diagram in the dedicated installations manual, inside the kit of the antitheft.

IMMOBILISATION POINT **Inertial switch**
Cut the GREEN/ORANGE wire directly in the wiring harness coming out from the inertial switch, behind the passenger's side glove compartment.

STARTER +50: Cut the GREY/BLACK wire, at the position nr.7, in the 7 way black connector, in the ignition key.

BONNET SWITCH Install an additional switch on the headlamp support plate, driver's side.

DOORS AND BOOT SWITCHES Connect to the BLACK/BLUE wire, at the position nr.3, in the dark grey connector, in the central under the driver's side steering column.