



CAR SECURITY

SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00

www.cobra.it

MAKE

FORD

MOD.

GALAXY

YEAR

02 →

PETROL
DIESEL

ALARM/SIREN POSITION

Position the compact alarms and the sirens in the engine compartment, on the panel near the battery.

CENTRAL UNIT POSITION

Position the modular systems and the modules behind the fuse box, under the dashboard, driver's side.

POWER SUPPLY

+ 30: connect to the 4 mm² RED wire located in the black multiway connector, behind the fuse box.

- 31: connect with a cable terminal to one of the terminals located on the bulkhead, driver's side.

IGNITION WIRE

+ 15/54: connect to the 3 mm² YELLOW/BLACK wire located in the wiring harness under the steering column.

DIRECTION INDICATORS

Connect to the 1 mm² WHITE/BLACK and GREEN/BLACK wires located in the black connector, above on the left, in the front part of the fuse box.

ELECTRIC WINDOWS

Comfort positive control

Temporize the 1 mm² GREY wire (the same wire of the doors) located in the wiring harness coming out of the driver's side door.

CENTRAL DOORS LOCKING

Positive controls

Connect to the GREY wire (locking) located in the wiring harness coming out of the driver's side door and to the GREEN wire located at the position nr. 5 (unlock), in the 12 way connector marked P5, in the fuse box, under the driver's side dashboard.

IMMOBILISATION POINT 1

Fuel pump

Cut the YELLOW/BLUE wire located at the position nr. 3 of the connector marked "G1" on the rear of the fuse box.

IMMOBILISATION POINT 2

Electronic central

Cut the RED/YELLOW wire in the 6 way connector marked "N" in the fuse box.

STARTER

+50: Cut the RED/BLACK wire located in the connector marked "H1" on the rear of the fuse box.

BONNET SWITCH

Install an additional switch on the right lateral bonnet stop, driver's side.

DOORS AND BOOT SWITCHES

Connect to the 1 mm² BROWN/YELLOW wire located in the black multiway connector under the left frontal part of the fuse box.