



CAR SECURITY

SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00

www.cobra.it

MAKE

FORD

MOD.

KA*

YEAR

01 →

PETROL
DIESEL

* Models with original equipment keyless entry system.

ALARM/SIREN POSITION

Position the compact alarms and the sirens on the support of the servobrake, in the engine compartment.

POWER SUPPLY

+ 30: connect to the 3 mm² RED wire located in the connections of the general input in the fuse box.
- 31: connect to the 2 mm² BLACK wire located in the shunting of the general bulks behind the sill cover, drivers side.

IGNITION WIRE

+ 15/54: connect to the 1,5 mm² YELLOW wire located in the black connector coming out of the ignition key.

DIRECTION INDICATORS

Connect to the 1,5 mm² BLUE and BLUE/RED wire located in the wiring harness that goes from the dashboard to the sill cover, drivers side.

ELECTRIC WINDOWS

Positive control signal

Front window, driver's side:

cut the WHITE wire coming out of the respective push button.

Front window, passenger's side:

cut the WHITE/VIOLET wire coming out of the respective push button.

ACTIVAT./DEACTIVATION CONTROLS

Connections antithefts/vehicle

Art.3800

YELLOW/BLACK
GREY/BLACK
VIOLET

Vehicle

YELLOW/RED
WHITE/RED
YELLOW/BLACK

Position

Central behind sill cover, drivers side
Central behind sill cover, drivers side
Negative control roof lamp lighting from tx, central behind sill cover, drivers side.

ORANGE

BLACK/ORANGE

Negative control original direction indicators in the central in the sill cover, drivers side.

VIOLET/WHITE

Ground

Car body

ORANGE/WHITE

+30

Fuse box supply

Note: In the central there are two YELLOW/BLACK wires, one of them is a fixed positive, use the other YELLOW/BLACK wire.

IMMOBILISATION POINT

+ 15 general: cut the 2 mm² BLACK wire located in the wiring harness coming out of the connector of the ignition key.

STARTER

+ 50: cut the 2 mm² YELLOW/BLACK wire located in the wiring harness coming out of the connector of the ignition key. It is suggested to verify the function with a tester.

BONNET SWITCH

Install an additional switch on the front headlamp support plate, drivers side.

DOORS SWITCH

Connect to the 1 mm² GREEN/BLACK wire located in the wiring harness under the left sill cover, drivers side.

BOOT SWITCH

As the boot has not a courtesy lamp, it is necessary to install an additional switch.