



CAR SECURITY

SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00

www.cobra.it

MAKE

FORD

MOD.

MONDEO*

YEAR.

01 →

PETROL
DIESEL

* Models with original equipment keyless entry system.

ALARM/SIREN POSITION

Position the compact alarms and the sirens on the support of the shock absorber, in the engine compartment, driver's side. To pass the cables use the original rubber sleeve located on the bulkhead that divides the engine compartment and the passenger's compartment, near the servobrake.

CENTRAL UNIT POSITION

The modular systems and the modules should be positioned under the dashboard, driver's side.

POWER SUPPLY

+ 30: Connect to the 4 mm² RED wire located in a multiway connector in the fuse box.
- 31: Connect directly to the car body.

IGNITION WIRE

+ 15/54: Connect to the 2,5 mm² GREEN/RED wire located in a multiway connector placed in the front part of the fuse box.

DIRECTION INDICATORS

Connect to the LIGHT BLUE and LIGHT BLUE/RED wires located in the nr. 3 light blue connector, in the fuse box.

ELECTRIC WINDOWS

Positive control signal

Front window, driver's side:

cut the 2 mm² WHITE wire directly on the coming out of the window motor located inside the driver's side door.

Front window, passenger's side:

cut the 2 mm² WHITE wire.

Rear window, driver's side:

cut the 2 mm² WHITE/BLUE wire.

Rear window, passenger's side:

cut the 2 mm² WHITE wire.

All these connections are made directly in the wiring harness under the sill cover, driver's side, except for that of the driver's side window.

ACTIVAT./DEACTIVATION CONTROLS

Connections antithefts/vehicle

38XX

GREY/BLACK

vehicle

ground

Position

car body

YELLOW/BLACK

YELLOW pos. 4

GREY connector

VIOLET/WHITE

ground

car body

ORANGE

+30

positive in the fuse box

VIOLET

BLACK/GREEN pos.16

GREEN connector

ORANGE/WHITE

+30

positive in the fuse box

The grey and green connectors are located on the coming out of the central doors locking unit placed behind the glove compartment, passenger's side.

Note: The antitheft system will activate making the double central locking.

IMMOBILISATION POINT

Gasoil pump

Cut the VIOLET/ORANGE wire located in the 8 way oval connector, located near the accelerator group, in the engine compartment.

STARTER

Central block

Cut the YELLOW wire located in a 10 way black connector, in the fuse box, under the dashboard.

BONNET SWITCH

Install an additional switch on the front headlamp support plate, driver's side.

DOORS SWITCH

Connect to the BLACK/LIGHT BLUE wire located in the nr. 1 grey connector, in the fuse box.

Note: Wait the switch off of the lamp for programming of activation and deactivation controls

BOOT SWITCH

Connect to the BLACK/ORANGE wire located in the wiring harness coming out directly from the boot lamp.