



CAR SECURITY

SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00

www.cobra.it

MAKE	FORD	MOD.	TRANSIT	YEAR	98 →	PETROL	<input checked="" type="checkbox"/>	DIESEL	<input type="checkbox"/>
ALARM/SIREN POSITION	Position the compact alarms and the sirens in the engine compartment, on the left lateral panel of the wing, passenger's side. The modular systems and the modules should be positioned under the dashboard, passenger's side.								
POWER SUPPLY	+ 30: connect to the general supply wiring located in the fuse box. - 31: connect to the car body.								
IGNITION WIRE	+ 15/54: connect to the VIOLET/BLUE wire located in the wiring harness coming out of the multiway connector behind the left panel, driver's side.								
DIRECTION INDICATORS	Connect to the BLUE and BLUE/BROWN wires located in the wiring harness coming out of the connector of the lights switch.								
ELECTRIC WINDOWS	Positive control signal Front window, driver's side: cut the YELLOW wire located in the wiring harness coming out of the windows control switch, driver's side. Front window, passenger's side: cut the WHITE/VIOLET wire located in the wiring harness coming out of the multiway connector, behind the lateral panel, driver's side.								
CENTRAL DOORS LOCKING	Positive control signal Connect to the 1 mm ² WHITE/VIOLET wire (unlock) and to the YELLOW/BLACK wire (lock) located in the wiring harness coming out of the multiway connector behind the lateral panel, driver's side.								
IMMOBILISATION POINT 1	Fuel pump Cut the 1,5 mm ² YELLOW/BLACK wire located in the wiring harness coming out of the multiway connector, under the black plastic cover near the battery.								
IMMOBILISATION POINT 2	Electronic ignition cut Cut the GREEN/BLUE wire located in the wiring harness coming out of the brown relay in the black plastic box, on the left of the engine compartment, passenger's side.								
STARTER	+50: Cut the BLACK/YELLOW wire located in the wiring harness of the connector of the ignition key.								
BONNET SWITCH	Install an additional switch on the headlamp support plate, near the bonnet bumper rubber.								
DOORS SWITCH	Connect to the BLACK/GREEN wire located in the white connector, behind the fuse box and to the BLACK/BLUE wire coming out of the yellow relay, in the fuse box.								