



CAR SECURITY

SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00

www.cobra.it

MAKE

HONDA

MOD.

CIVIC

YEAR.

02 →

PETROL
DIESEL

ALARM/SIREN POSITION	Position the compact alarms and the sirens behind the headlamp, driver's side.
CENTRAL UNIT POSITION	Position the modular systems and the modules under the dashboard.
POWER SUPPLY	+30: connect to the WHITE wire located in the 5 way green connector, in the fuse box. - 31: connect to a ground cable.
IGNITION WIRE	+15/54: connect to the BLACK/RED wire located in the 5 way green connector, in the fuse box.
DIRECTION INDICATORS	Connect to the GREEN/RED and GREEN/YELLOW wires in the 10 way green connector, in the fuse box, on the right, under the steering column.
ELECTRIC WINDOWS	Positive control signal Front window, driver's side: cut the RED/BLACK wire, in the 20 way green connector, in the serial push-buttons panel, inside the driver's side door. Front window, passenger's side: cut the BLUE/BROWN wire, in the wiring harness coming out of the driver's side door. Rear window, driver's side: cut the BROWN/WHITE wire in the wiring harness coming out of the driver's side door. Rear window, passenger's side: cut the BLUE/ORANGE wire in the wiring harness coming out of the driver's side door.
CENTRAL DOORS LOCKING	Original door motor direct control Connect to the YELLOW/RED wire (lock) and to the WHITE/RED wire (unlock) located in the 24 way grey connector, on the left under the dashboard.
IMMOBILISATION POINT 1	Fuel pump Cut the YELLOW/GREEN wire with two ORANGE references located in the wiring harness coming out of the 20 way connector placed behind the fuse box. Under the driver's side dashboard.
IMMOBILISATION POINT 2	Central underlock Cut the BLACK/WHITE wire with 2 SILVER references located in the wiring harness of the 8 way white connector, placed on the coming out of the central, behind the plastic cover, under the driver's side dashboard.
STARTER	+50: Cut the BLACK/WHITE wire located in the wiring harness coming out of the connector of the black relay placed under the driver's side dashboard.
BONNET SWITCH	Install an additional switch on the headlamp support plate, driver's side.
DOORS SWITCH	Connect to the light GREEN/RED wire located in the 8 way grey connector, on the left, under the dashboard.
BOOT SWITCH	Connect to the RED wire in the 16 way green connector, on the front part of the fuse box.



CAR SECURITY


SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00


www.cobra.it

FITTING DIAGRAM N° 171

For the connection of central door locking on
HONDA CIVIC year 2002
(for 3100 - 3900 serie antithefts)

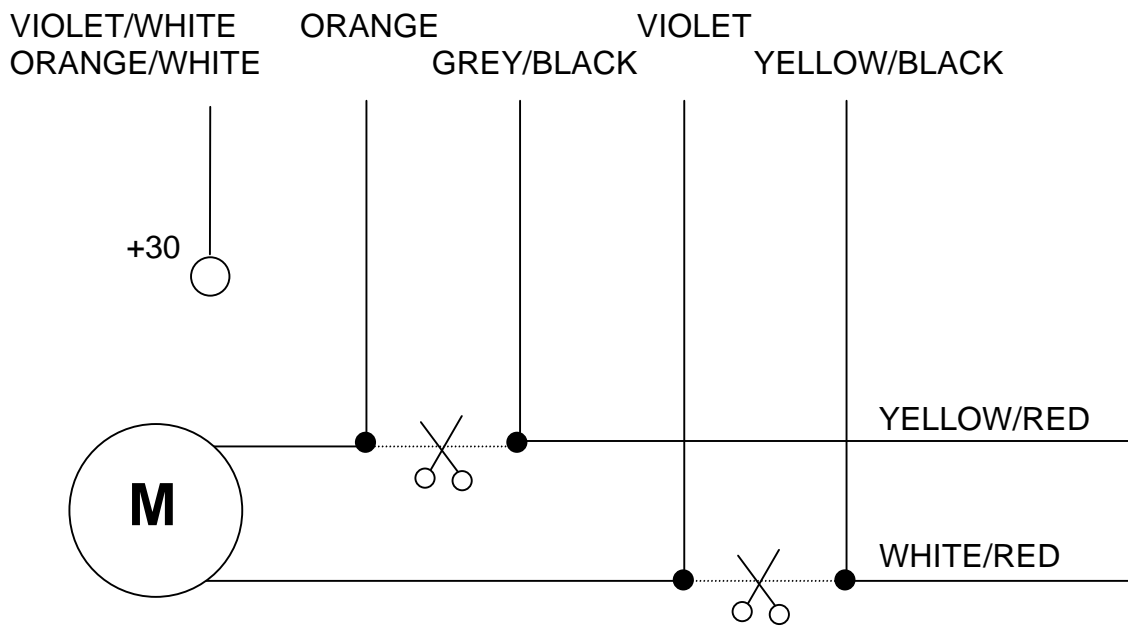

For the connection of central door locking on
HONDA CIVIC year 2002
(for BRIDGE serie antithefts)

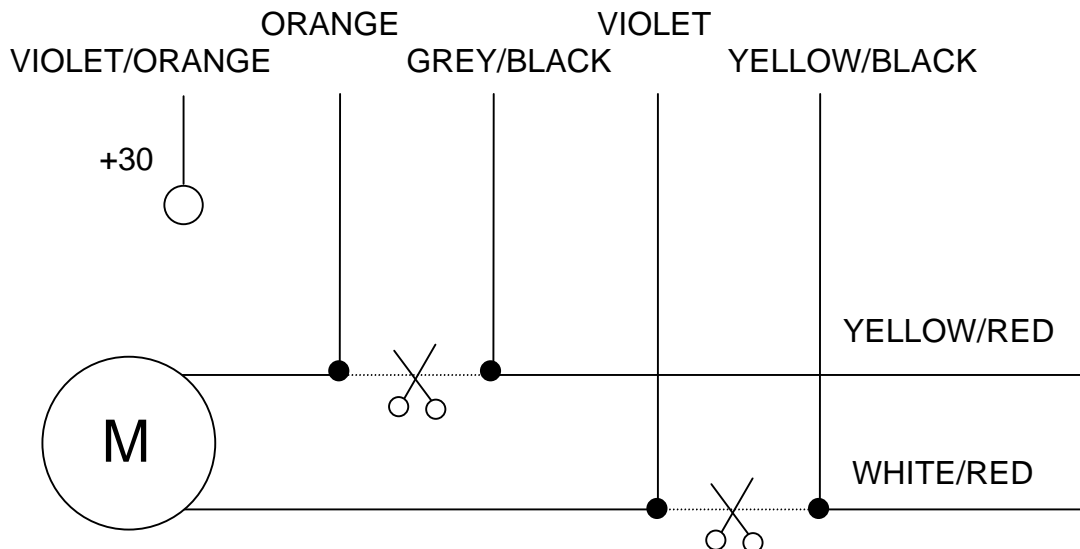

Note: This information is not binding, therefore it must be considered only an example for installation purposes that must be executed as per the instructions given on the product installation manual.

hociv02gbb.doc