



CAR SECURITY

SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00

www.cobra.it

MAKE	HONDA	MOD.	CIVIC	YEAR.	97 →	PETROL	<input checked="" type="checkbox"/>	DIESEL	<input type="checkbox"/>
ALARM/SIREN POSITION									
CENTRAL UNIT POSITION									
POWER SUPPLY									
IGNITION WIRE									
DIRECTION INDICATORS									
CENTRAL DOORS LOCKING									
IMMOBILISATION POINT									
STARTER									
BONNET SWITCH									
DOORS SWITCH									
BOOT SWITCH									



CAR SECURITY

SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00

www.cobra.it

FITTING DIAGRAM N° 60

Diagram for doors locking on
HONDA CIVIC '97
(for Bridge serie antithefts)



On the coming out of the central doors locking unit.



CAR SECURITY


SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00

www.cobra.it

FITTING DIAGRAM N° 60A

Diagram for doors locking on
HONDA CIVIC '97
(for serie 3100 antithefts)

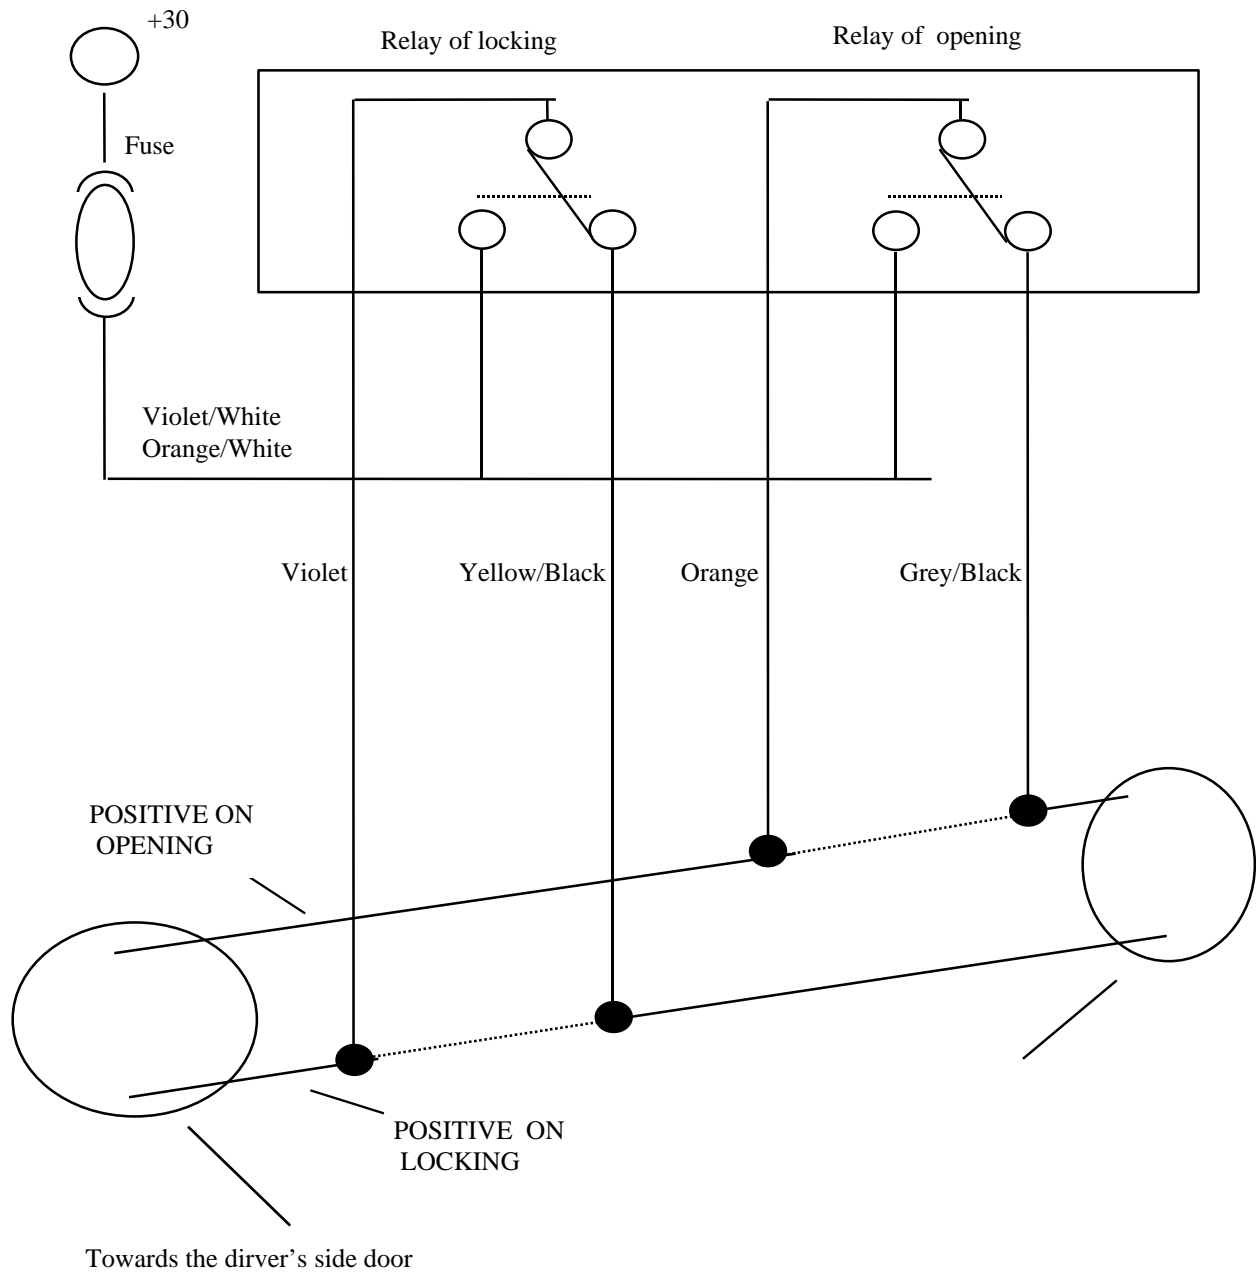

On the coming out of the central doors locking unit.