



CAR SECURITY

SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00

www.cobra.it

MAKE	HONDA	MOD.	CR-V	YEAR	97 →	PETROL <input checked="" type="checkbox"/>	DIESEL <input type="checkbox"/>
ALARM/SIREN POSITION	Position the compact alarms and the sirens in the engine compartment, on the support panel at the shock absorber, driver's side. Position the modular systems and the modules under the dashboard, driver's side.						
POWER SUPPLY	+ 30 : connect to the general supply wiring in the fuse box. - 31 : connect to the car body.						
IGNITION WIRE	+ 15/54 : connect to the 0,5 mm ² YELLOW/RED wire with GREY reference located in the wiring harness coming out of the 24 way light blue connector above the fuse box.						
DIRECTION INDICATORS	Connect to the 0,75 mm ² GREEN/YELLOW wire with GREY reference and to the GREEN /RED wire with GREY reference located in the wiring harness of the 6 way connector, in the front part of the fuse box.						
ELECTRIC WINDOWS	Positive control signal Front window, driver's side: cut the 1,5 mm ² RED/BLUE wire. Front window, passenger's side: cut the 1,5 mm ² BLUE/YELLOW wire with BROWN reference. Rear window, driver's side: cut the 1,5 mm ² GREEN/YELLOW wire with BROWN reference. Rear window, passenger's side: cut the 1,5 mm ² YELLOW wire with GREY reference. These connections should be effected in the wiring harness coming out of the 14 way transparent connector of the control switches.						
CENTRAL DOORS LOCKING	Negative control signal Connect to the 0,5 mm ² BLUE/RED wire with GREY reference (unlock) and to the 0,5 mm ² BLUE/WHITE wire with GREY reference (lock) located in the wiring harness coming out of the 14 way grey/white connector linked to the central doors locking unit, inside the driver's side door. Refer to the diagram nr. 126 .						
IMMOBILISATION POINT	Fuel pump Cut the 0,5 mm ² YELLOW/RED wire with GREY reference located in the 24 way light blue connector, above the fuse box.						
STARTER	+ 50 : Cut the 2,5 mm ² BLACK/WHITE wire located in the wiring harness coming out of the 3 way brown connector, behind the fuse box.						
BONNET SWITCH	Install an additional switch on the bonnet bumper, near the original rubber in correspondence of the driver's side headlamp.						
DOORS SWITCH	Connect to the 0,5 mm ² LIGHT GREEN/RED wire with GREY reference located in the wiring harness coming out of the 20 way grey connector, behind the sill cover, driver's side.						
BOOT SWITCH	Connect to the 0,75 mm ² BLUE/BLACK wire with GREY reference located in the wiring harness coming out of the 14 way blue connector, in the superior part of the fuse box.						



CAR SECURITY

SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00

www.cobra.it

FITTING DIAGRAM N°126

Diagram to make the locking and the opening of the doors on
HONDA CR-V, HR-V, LOGO
(for antitheft with 6 wires locking, with serie Bridge using Art. 1044)

