



CAR SECURITY

SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00

www.cobra.it

MAKE	HONDA	MOD.	HR-V	YEAR	99 →	PETROL <input checked="" type="checkbox"/>	DIESEL <input type="checkbox"/>
POWER SUPPLY	+ 30: connect to the 4 mm ² RED wire located at the entrance of the fuse box. - 31: connect with a ring terminal to the car body.						
IGNITION WIRE	+ 15/54: connect to the 2 mm ² YELLOW wire with SILVER reference located in the 28 way light blue connector on the left of the steering column.						
DIRECTION INDICATORS	Connect to the GREEN/YELLOW wires with SILVER reference and GREEN/RED with SILVER reference located in the 28 way light blue connector on the left of the steering column.						
ELECTRIC WINDOWS	Positive control signal Front window, driver's side: cut the 1,5 mm ² RED/BLUE wire. Front window, passenger's side: cut the 1,5 mm ² BLUE/YELLOW wire. Rear window, driver's side: cut the 1,5 mm ² GREEN/YELLOW wire. Rear window, passenger's side: cut the 1,5 mm ² YELLOW wire. These connections are made directly in the wiring harnesses coming out of the original switches.						
CENTRAL DOORS LOCKING	Original door motor direct control Cut the WHITE/RED wire with SILVER reference (lock) and the WHITE/RED wire with SILVER reference (unlock) located in the wiring harness coming out of the white original locking unit above the fuse box. In some versions the central doors locking unit is inside the driver's side door. Refer to the diagram nr.126 .						
IMMOBILISATION POINT	Fuel pump Cut the YELLOW/RED wire with GREY reference located in the wiring harness in the light blue connector above the fuse box.						
STARTER	+50: Cut the WHITE/BLACK wire in the brown connector located on the rear of the fuse box.						
BONNET SWITCH	Install an additional switch on the headlamp support plate.						
DOORS SWITCH	Connect to the light GREEN/RED wire located in the wiring harness coming out of the 20 way grey connector of the driver's side door.						
BOOT SWITCH	Connect to the BLUE/BLACK wire in the wiring harness of the blue connector located on the upper part of the fuse box.						



CAR SECURITY

SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00

www.cobra.it

FITTING DIAGRAM N°126

Diagram to make the locking and the opening of the doors on
HONDA CR-V, HR-V, LOGO
(for antitheft with 6 wires locking, with serie Bridge using Art. 1044)

