



CAR SECURITY

SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00

www.cobra.it

MAKE

HONDA

MOD.

INTEGRA

YEAR

98 →

PETROL
DIESEL

ALARM/SIREN POSITION

Position the compact alarms and the sirens near the steering column, passenger's side.

CENTRAL UNIT POSITION

The modular systems and the modules should be positioned under the dashboard, driver's side.

POWER SUPPLY

+ 30: connect to the 2 mm² WHITE/BLUE wire located in the 2 way connector at the entrance of the fuse box.
- 31: connect with a terminal directly to the car body.

IGNITION WIRE

+ 15/54: connect to the wire located at the position marked "+15" in the wiring harness coming out of the ignition key.

DIRECTION INDICATORS

Connect to the GREEN/VIOLET wire with GREY references and GREEN/YELLOW wire with Grey reference located in a multiway wiring harness under the dashboard, driver's side.

ELECTRIC WINDOWS

Positive control signal
Front window, driver's side:
cut the 2 mm² RED/BLUE wire coming out of the switch.
Front window, passenger's side:
cut the 2 mm² ORANGE/WHITE wire coming out of the switch.

CENTRAL DOORS LOCKING

Additional motor
As the driver's side door has not an actuating device it is necessary to install an additional motor.

IMMOBILISATION POINT

Fuel pump
Cut the YELLOW/GREEN wire with GREY references located behind the left bulkhead, driver's side.

STARTER

+50: Cut the wire located at the position marked "+50" of the ignition key.

BONNET SWITCH

Install an additional switch on the headlamp support plate, near the headlamp, driver's side.

DOORS SWITCH

Connect to the 1,5 mm² GREEN wire with GREY references located in the wiring harness behind the left lateral bulkhead, driver's side.

BOOT SWITCH

Connect to the GREEN/RED wire directly out going from the connector of the boot light.