



CAR SECURITY

SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00

www.cobra.it

MAKE

HYUNDAI

MOD.

COUPE'

YEAR

02 →

PETROL
DIESEL

ALARM/SIREN POSITION	Position the compact alarms and the sirens on the driver's side wheelhouse.
CENTRAL UNIT POSITION	Position the modular systems and the modules under the dashboard.
POWER SUPPLY	+30: connect to the RED wire in the unipolar connector, marked 'BCM-DE' in the frontal part of the fuse box. -31: connect to one of the ground terminals.
IGNITION WIRE	+ 15/54: connect to the RED wire in the unipolar connector, marked 'BCM-LM' on the rear part of the fuse box.
DIRECTION INDICATORS	Connect to the ORANGE wire, at the position nr. 17 and to the RED/ORANGE wire, at the position nr. 13, in the 22 way connector, marked 'BCM-FF' in the front part of the fuse box.
ELECTRIC WINDOWS	Positive control signal Front window, driver's side: cut the ORANGE wire located in the 10 way white connector coming out of the switches panel, inside the driver's side door. Front window, passenger's side: cut the PINK wire located in the 8 way white connector coming out of the switches panel, inside the passenger's side door.
CENTRAL DOORS LOCKING	Door original motor direct control Cut the GREEN/BLACK wire, at the position nr. 8 (unlock), and the GREEN wire, at the position nr. 6 (lock), in the 22 way connector, marked 'BCM-FF', in the frontal part of the fuse box.
IMMOBILISATION POINT	Fuel pump Cut the 2 mm ² RED wire located in the wiring harness coming out of the 15 way white connector, located behind the left lateral bulkhead, driver's side.
STARTER	+50: Cut the WHITE wire located in the wiring harness of the 6 way white connector coming out of the ignition key.
BONNET SWITCH	Install an additional switch on the headlamp support plate, driver's side.
DOORS SWITCH	Connect to the GREEN/ORANGE wire, at the position nr. 9, in the 20 way connector, marked 'BCM-HM', behind the fuse box and to the GREEN/ORANGE wire, at the position nr. 16, in the 16 way connector, marked "BCM-JM" behind the fuse box.
BOOT SWITCH	Connect to the YELLOW/BLACK wire, at the position nr. 8, in the 16 way connector, marked 'BCM-JM', behind the fuse box.