



SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00

www.cobra.it

MAKE

HYUNDAI

MOD.

COUPE'*

YEAR

02 →

PETROL
DIESEL



* Models with original equipment keyless entry system.

ALARM/SIREN POSITION

Position the compact alarms and the sirens on the driver's side wheelhouse.

CENTRAL UNIT POSITION

Position the modular systems and the modules under the dashboard.

POWER SUPPLY

+30: connect to the RED wire in the unipolar connector, marked 'BCM-DE' in the frontal part of the fuse box.

-31: connect to one of the ground terminals located behind the driver's side bulkhead.

IGNITION WIRE

+15/54: connect to the RED wire in the unipolar connector, marked 'BCM-LM' on the rear part of the fuse box.

DIRECTION INDICATORS

Connect to the ORANGE wire, at the position nr. 17 and to the RED/ORANGE wire, at the position nr. 13, in the 22 way connector, marked 'BCM-FF' in the front part of the fuse box.

ELECTRIC WINDOWS

Positive control signal

Front window, driver's side:

cut the ORANGE wire coming out of the 10 way white connector and coming out of the switches panel, inside the driver's side door.

Front window, passenger's side:

cut the 2 mm² PINK wire located in the wiring harness coming out of the driver's side door.

ACTIVAT./DEACTIVATION CONTROLS

Connections antitheft/vehicle

Art. 3800

Vehicle	Position	
YELLOW/BLACK	GREEN/BLACK	pos. nr.8, 22 way BCM-FF connector
GREY/BLACK	GREEN	pos. nr.6, 22 way BCM-FF connector
VIOLET	YELLOW	pos. nr.8, 12 way BCM-EF connector
ORANGE	BLUE	pos. nr.3, 12 way BCM-EF connector
VIOLET/WHITE	ground	car body
ORANGE/WHITE	positive	supply in the fuse box.

Refer to the "C" diagram of the dedicated installations manual, inside the kit of the antitheft.

IMMOBILISATION POINT

Fuel pump

Cut the 2 mm² RED wire located in the wiring harness behind the driver's side bulkhead.

STARTER

+50: Cut the WHITE wire located in the wiring harness coming out of the connector of the ignition key.

BONNET SWITCH

Install an additional switch on the headlamp support plate, driver's side.

DOORS SWITCH

Connect to the GREEN/ORANGE wire, at the position nr. 9, in the 20 way connector, marked 'BCM-HM', behind the fuse box and to the GREEN/ORANGE wire, at the position nr. 16, in the 16 way connector, marked "BCM-JM" behind the fuse box.

BOOT SWITCH

Connect to the YELLOW/BLACK wire, at the position nr. 8, in the 16 way connector, marked 'BCM-JM', behind the fuse box.