



CAR SECURITY

SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00

www.cobra.it

MAKE **IVECO** MOD. **351*** YEAR. **01** → PETROL DIESEL

* Models with original equipment keyless entry system.

ALARM/SIREN POSITION Position the compact alarms and the sirens, on the support of the wheelhouse, passenger's side, in the engine compartment. Pass the cables through the original rubber sleeve located in the bulkhead that divides the engine compartment from the passenger's compartment, passenger's side.

CENTRAL UNIT POSITION Position the modular system and the modules under the dashboard, driver's side.

POWER SUPPLY + 30: connect directly to the positive end of the battery.
- 31: connect with a terminal directly to the car body.

IGNITION WIRE + 15/54: connect to the LIGHT BLUE/BLACK wire located in the wiring harness coming out of the ignition key.

DIRECTION INDICATORS Connect to the LIGHT BLUE wire marked 1129 and to the LIGHT BLUE wire marked 1123 located in the wiring harness coming out of the central placed under the steering wheel; to go in it is necessary to take away the protection panel.

ELECTRIC WINDOWS **Positive control signal**
Front window, driver's side:
cut the GREEN wire.
Front window, passenger's side:
cut the DURK GREEN wire.
These connections must be done on the coming out of the respective motors.

ACTIVAT./DEACTIVATION CONTROLS

Connections antitheft/vehicle

Art.3800	Vehicle	Position
YELLOW/BLACK	PINK	Operating central
GREY/BLACK	Positive	Supply in the fuse box
VIOLET	Positive	Supply in the fuse box
ORANGE	Positive	Supply in the fuse box
VIOLET/WHITE	Positive	Supply in the fuse box
ORANGE/WHITE	Positive	Supply in the fuse box

The central is marked VIM215/CRX and located behind the heating panel; to go in it is necessary to take away the covering panel under the passenger's side dashboard.

IMMOBILISATION POINT **Gasoil pump**
Cut the GREEN/BLACK wire located in the wiring harness coming out of the connector of the ignition key.

STARTER +50: Cut the 2 mm² GREEN wire located in the wiring harness coming out of the connector of the ignition key.

BONNET SWITCH Install an additional switch on the headlamp support plate, driver's side.

DOORS SWITCH Connect to the wire, at the position nr.2, of the 3 way connector coming out of the lamp.