



CAR SECURITY

SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00

www.cobra.it

MAKE

JEEP

MOD.

CHEROKEE

YEAR

98 →

PETROL
DIESEL

ALARM/SIREN POSITION

Position the compact alarms and the sirens in the engine compartment, on the support of the shock absorber, passenger's side. Pass the cables through the original rubber sleeve near the clutch pedal.

POWER SUPPLY

+ 30: connect to the general supply wiring at the entrance of the fuse box.
- 31: connect with a cable terminal to one of the terminals down on the left of the dashboard, driver's side.

IGNITION WIRE

+ 15/54: connect to the 2 mm² BLUE wire of the wiring harness located in the channel along the steering column.

DIRECTION INDICATORS

Connect to the BROWN/RED and BEIGE wires for the left direction indicators; GREEN/RED and GREEN/WHITE for the right direction indicators located in the channel mentioned above. It is necessary, for this connection, to divide the direction indicators lines with 4 diodes.

ELECTRIC WINDOWS

Positive control signal

Front window, driver's side:

cut the LIGHT BLUE wire coming out of the serial switch.

Front window, passenger's side:

cut the BROWN/WHITE wire in the wiring harness coming out of the 6 way connector, behind the left lateral panel, driver's side.

Rear window, driver's side:

cut the 2 mm² LIGHT BLUE/WHITE wire located in the same connector mentioned above.

Rear window, passenger's side:

cut the 2 mm² GREY/BLACK wire located in the same connector mentioned above.

CENTRAL DOORS LOCKING

Negative control signal

Connect to the 1,5 mm² PINK/VIOLET wire (unlock) and ORANGE/VIOLET wire (lock) located in the wiring harness coming out of the 13 way connector behind the left lateral panel, driver's side.

IMMOBILISATION POINT 1

Fuel pump

Cut the 1,5 mm² YELLOW/RED wire located in the wiring harness coming out of the 2 way green connector linked to the switch operated by the clutch pedal.

IMMOBILISATION POINT 2

Pump relay control

Cut the 0,75 mm² ORANGE wire in the wiring coming out of the pump relay located in the relay box, behind the battery, in the engine compartment.

STARTER

+50: Cut the 2 mm² YELLOW wire located in the wiring harness inside the channel under the steering column.

BONNET SWITCH

Install an additional switch on the headlamp support plate, in correspondence with the left lateral lamp.

DOORS AND BOOT SWITCH

Connect to the 1 mm² BLACK/WHITE wire located in the wiring harness coming out of the lamp under the left lateral dashboard.