



CAR SECURITY

SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00

www.cobra.it

MAKE

KIA

MOD.

CARNIVAL*

YEAR.

02 →

PETROL

DIESEL

* Models with original equipment keyless entry system.

ALARM/SIREN POSITION

Position the compact alarms and the sirens in the engine compartment, on the support of the shock absorber, driver's side.

CENTRAL UNIT POSITION

Position the modular systems and the modules on the left, under the dashboard, driver's side.

POWER SUPPLY

+30: connect to the 4 mm² RED wire located in a multiway connector, in the fuse box.
- 31: connect with a ring terminal directly to the car body.

IGNITION WIRE

+15/54: connect to the wire at the position marked "+15/54" directly in the wiring harness coming out of the connector of the ignition key.

DIRECTION INDICATORS

Connect to the GREEN wire at the position nr. 13 and to the LIGHT BLUE wire at the position nr. 14 located in the 14 way white connector on the rear of the check control.

ELECTRIC WINDOWS

Front window, driver's side:

cut the BLUE and WHITE wires located in the wiring harness coming out of the 9 way white connector on the push-button panel of the driver's side door.

Front window, passenger's side:

cut the RED/YELLOW and GREEN wires in the wiring harness coming out of the 12 way white connector, above the fuse box.

Rear window, driver's side:

cut the RED and WHITE wires in the 10 way white connector coming out of the push- buttons near the wing mirror.

Rear window, passenger's side:

cut the GREEN and YELLOW wires in the 10 way white connector coming out of the push- buttons near the wing mirror.

ACTIVAT./DEACTIVATION CONTROLS

Connections antitheft/vehicle

Art.3800	Vehicle	Position
YELLOW/BLACK	BLUE	driver's side door output
GREY/BLACK	RED/BLACK	driver's side door output
VIOLET	YELLOW/BLACK	driver's side door output
VIOLET/WHITE	ground	car body
ORANGE	positive	fuse box supply
ORANGE/WHITE	positive	fuse box supply

Refer to '**B**' diagram in the dedicated installations manual, inside the kit of the antitheft.

IMMOBILISATION POINT

Gasoil pump

If the vehicle has the inertial switch, it is suggested the interruption of one of the two wires coming out from the same.

STARTER

+50: Cut the wire located at the position marked "+50" directly in the wiring harness coming out of the ignition key.

BONNET SWITCH

Install an additional switch on the front headlamp support plate.

DOORS SWITCH

Connect to the GREEN wire at the position nr. 1 in the 14 way white connector located on the rear of the check control.

BOOT SWITCH

Connect to the GREEN/BLACK wire at the position nr. 8 in the 14 way white connector located on the rear of the check control.