



CAR SECURITY

SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00

www.cobra.it

MAKE	MOD.	YEAR.	PETROL	DIESEL
KIA	SHUMA	02 →	<input checked="" type="checkbox"/>	<input type="checkbox"/>

ALARM/SIREN POSITION	Position the compact alarms and the sirens on the passenger's side wheelhouse, in the engine compartment.
CENTRAL UNIT POSITION	Position the modular systems and the modules under the dashboard, driver's side. Pass the cables using the original rubber core hitch located on the left of the bulkhead that divides the engine compartment and the passenger's compartment. It is easier to see it from the inside of the car, under the driver's side dashboard.
POWER SUPPLY	+30: connect to the 4mm ² RED wire located in a multiway connector, at the entrance of the fuse box. - 31: connect with a ground cable on the left, under the dashboard, driver's side.
IGNITION WIRE	+15/54: connect to the YELLOW/GREEN wire located in the wiring harness coming out of the 24 way white connector placed near the adjusting switch for the lamps dip, under the dashboard, driver's side.
DIRECTION INDICATORS	Connect to the GREEN/WHITE and GREEN/YELLOW wires located in the wiring harness coming out of the 20 way white connector, placed behind the left lateral bulkhead, driver's side.
ELECTRIC WINDOWS	Positive control signal Front window, driver's side: cut the BLUE/YELLOW wire in the wiring harness coming out of the push-buttons panel, directly inside the driver's side door. Front window, passenger's side: cut the RED/BLUE wire in the wiring harness coming out of the driver's side door. Rear window, driver's side: cut the RED/YELLOW wire in the wiring harness coming out of the driver's side door. Rear window, passenger's side: cut the RED/BLACK wire in the wiring harness coming out of the driver's side door.
CENTRAL DOORS LOCKING	Negative control signal Connect to the YELLOW/BLACK wire (lock) and YELLOW/LIGHT BLUE wire (unlock) located in the wiring harness coming out of the 7 way blue connector, coming out of the central locking placed above, on the left, under the dashboard, driver's side.
IMMOBILISATION POINT	Fuel pump Cut the PINK/BLACK wire located in the wiring harness coming out of the 20 way white connector located behind the left lateral bulkhead, driver's side.
STARTER	+50: Cut the BLACK/YELLOW wire located in the wiring harness coming out of the 6 way blue/black connector fixed on the left of the steering column.
BONNET SWITCH	Install an additional switch on the front headlamp support plate, driver's side.
DOORS SWITCH	Connect to the LIGHT GREEN/RED wire located in the wiring harness coming out of the 20 way white connector, placed behind the left lateral bulkhead, driver's side.
BOOT SWITCH	Connect to the GREEN/WHITE wire located in the wiring harness coming out of the connector of the boot lamp.