



## CAR SECURITY

### SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00

[www.cobra.it](http://www.cobra.it)

MAKE **KIA** MOD. **SPORTAGE\*** YEAR **99** → PETROL  DIESEL

\* Models with original equipment keyless entry system.

<b>ALARM/SIREN POSITION</b>	Position the compact alarms and the sirens in the engine compartment on the side of the servobrake.
<b>CENTRAL UNIT POSITION</b>	The modular systems and the modules should be positioned under the dashboard, driver's side. Pass the cables through the free core hitch located on the side of the servo brake, under the accelerator cable.
<b>POWER SUPPLY</b>	+ 30: connect to the general supply wiring at the entrance of the fuse box. - 31: connect directly to the car body.
<b>IGNITION WIRE</b>	+15/54: connect to the 1 mm <sup>2</sup> BLACK/WHITE wire located in the wiring harness coming out of the ignition key.
<b>DIRECTION INDICATORS</b>	Connect to the RED/BLUE wire with BLACK references and to the RED/WHITE wire with BLACK references located in the 8 way black connector on the rear of the connectors holder bracket, on the left of the steering column.
<b>ELECTRIC WINDOWS</b>	<b>Front window, driver's side:</b> cut the RED/BLUE wire. <b>Front window, passenger's side:</b> cut the RED/BLUE wire. Connections must be done directly in the 11 way transparent connector located on the coming out of the switches inside the driver's side door. <b>Rear window, driver's side:</b> cut the RED wire. <b>Rear window, passenger's side:</b> cut the LIGHT BLUE/WHITE wire. Connections for the rear windows must be done in the wiring harness coming out of the driver's side door.
<b>ALARM CONTROLS</b>	<b>Negative control signal</b> Connect to the YELLOW/RED wire, for the connecting, and to the RED/GREEN wire, for the disconnecting, located in the wiring harness coming out of the 21 way transparent connector of the central doors locking unit, above the glove box, passenger's side.
<b>IMMOBILISATION POINT</b>	<b>Fuel pump</b> Cut the GREEN wire located in the wiring harness coming out of the relè marked "FUEL PUMP" located in the fuse box, in the engine compartment.
<b>STARTER</b>	+ 50: Cut the BLACK/YELLOW wire in the wiring harness coming out of the ignition key.
<b>BONNET SWITCH</b>	Install an additional switch on the front headlamp support grill.
<b>DOORS SWITCH</b>	Connect to the YELLOW/GREEN wire located in the wiring harness coming out of the 21 way transparent connector linked to the central doors locking unit located above the glove box, passenger's side.
<b>BOOT SWITCH</b>	Connect to the GREEN/YELLOW wire in the wiring harness coming out of the boot lamp.