



CAR SECURITY

SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00

www.cobra.it

MAKE	LANCIA	MOD.	DELTA	YEAR	96 →	PETROL	<input checked="" type="checkbox"/>	DIESEL	<input type="checkbox"/>
ALARM/SIREN POSITION	Position the compact alarms and the sirens in the engine compartment, on the support bracket of the shock absorber, driver's side. Pass the cables through the core hitch above the fuse of the servobrake, on the left in the engine compartment, driver's side.								
POWER SUPPLY	+ 30 : connect to the 4 mm ² RED wire in a multiway connector located on the left of the fuse box. - 31 : connect with a cable terminal to the ground terminal behind the left lateral plastic panel, driver's side.								
IGNITION WIRE	+ 15/54 : connect to the 1 mm ² LIGHT BLUE/RED wire located in a 6 way white connector, behind the fuse box.								
DIRECTION INDICATORS	Connect to the 1 mm ² LIGHT BLUE and LIGHT BLUE/BLACK wires located in the 10 way black connector, at the rear of the fuse box.								
ELECTRIC WINDOWS	Positive control signal Front window, driver's side: cut the VIOLET/YELLOW wire located in the wiring harness coming out of the green "magic" central unit, under the driver's side dashboard. Front window, passenger's side: cut the WHITE/RED wire located in the wiring harness coming out of the green "magic" central unit, under the driver's side dashboard. Rear window, driver's side: cut the 1,5 mm ² GREY/RED wire located in the wiring harness coming out of the connector of the grey central unit under the rear seat, driver's side. Rear window, passenger's side: cut the 1,5 mm ² GREY wire located in the wiring harness coming out of the connector of the grey central unit, under the rear seat, driver's side.								
CENTRAL DOORS LOCKING	Negative control signal Connect to the 1 mm ² BLUE wire (lock) and WHITE wire (unlock) located in the wiring harness coming out of the 4 way black connector, at the rear of the fuse box, near the connector coming out of the door.								
IMMOBILISATION POINT 1	Fuel pump Cut the 1,5 mm ² BROWN/WHITE wire located in the bundles of cables under the presetting of the car radio.								
IMMOBILISATION POINT 2	+ 15 general Cut the 2 mm ² ORANGE wire located in the wiring harness coming out of the 3 way orange connector, linked to the ignition key.								
STARTER	+ 50 : Cut the 1,5 mm ² RED/BLACK wire located in the wiring harness coming out of the 3 way orange connector linked to the ignition key.								
DOORS SWITCH	(Front doors): connect to the GREY/RED and GREY/GREEN wires of the wiring harness coming out of the 6 way white connector located behind the fuse box. (Rear doors): connect to the GREY/YELLOW and GREY/BLACK wires coming out of the 6 way white connector behind the fuse box.								
BOOT SWITCH	Connect to the GREY/WHITE wire in one of the two connectors above mentioned, behind the fuse box.								